

PG24SG

How to take out the brackets to use the
jerky racks




Warning: Before you begin
make sure the item is
unplugged and not turned on



Take out the warming rack

Get a screw driver and take out the 4 screws that are connecting the brackets onto the pellet grill. NOTE you may need to get a small crescent wrench to hold the bolt on the inside

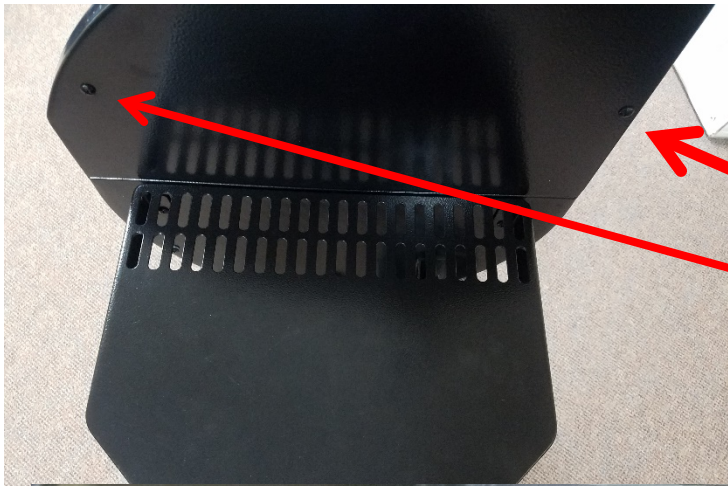

If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.