

How to replace the Pellet Grill Hopper



Warning: Before you begin make sure the item is unplugged from the power source.

Before beginning make sure the Pellet grill is not plugged into a power source. The hopper needs to be empty of pellets.

You will need to unplug the internal thermometer from the controller. You will need to remove the 2 screws holding in the controller.

Then you will unplug the internal thermometer from the controller. It is located in the top clasp.





You will then want to remove the 4 screws that are holding the hopper onto the pellet grill. (Please note in the picture you cannot see the 2 other screws that are behind the shelf that the drip pan to sits on.) Once you have all the screws out, you can go ahead and pull it out and put the new one in and reassemble.

You will then remove the 2 screws that are holding the burn cup down to the grill.



If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.