


How to change the internal thermometer in the Pursuit.




Warning: Before you begin make sure the item is unplugged from the power source.

If you have not done so already,
undo the latch that holds the
hopper lid down.



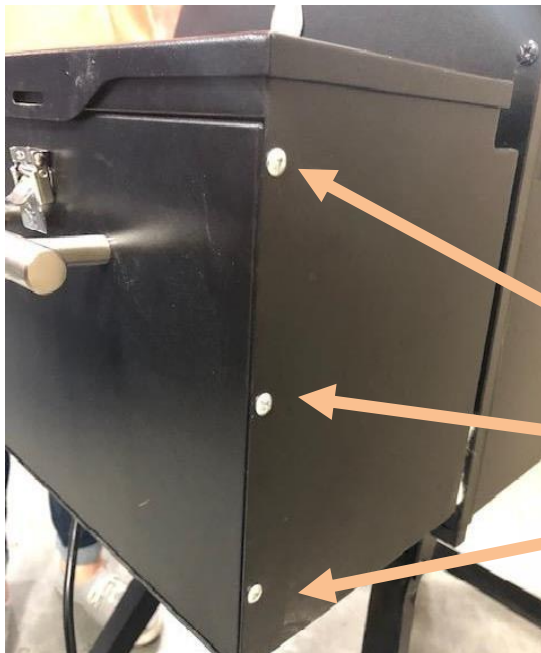

The next step would be to remove the side wall to get to the auger motor. To do this you would remove 3 screws from the front and back. Also, 2 screws on the bottom.

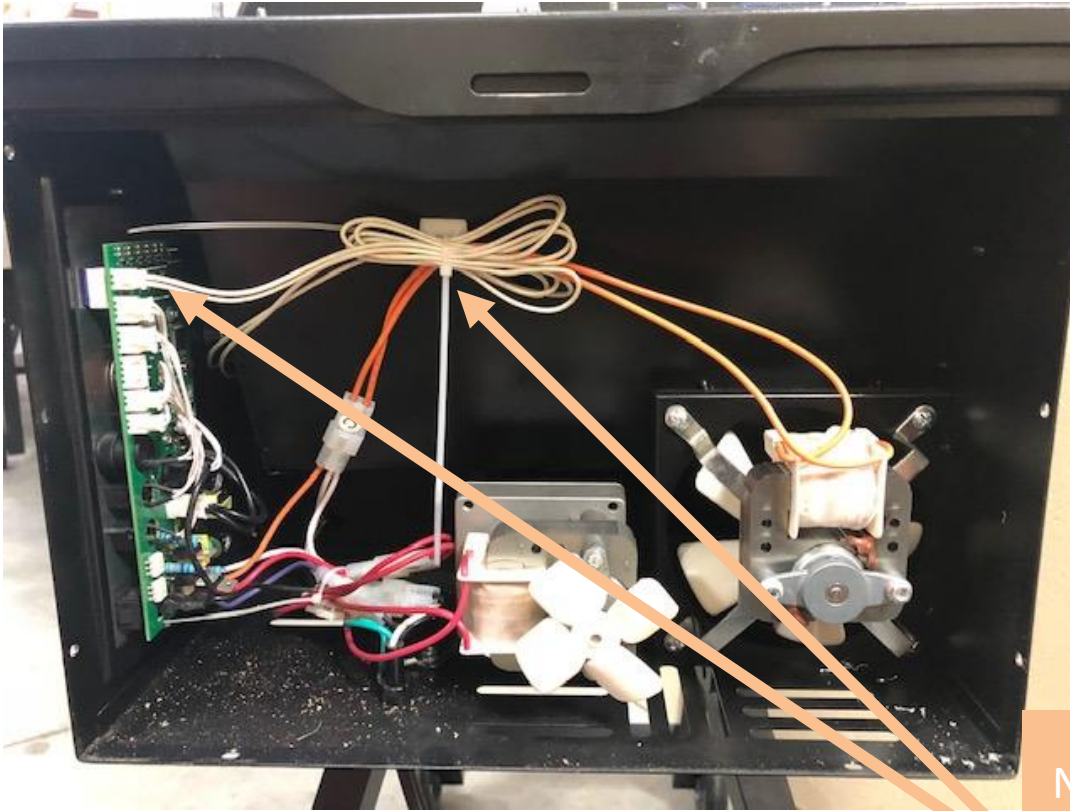

Now that you have the side of the hopper off and exposing the internal parts you will want to cut the zip tie that is holding the wires aside and also unplug the thermometer from the controller.



After you cut the zip tie, you will want to remove the screws that hold on the internal thermometer. Once the screws are removed and it is unplugged from the controller, you can angle the internal thermometer out and place the new one in the old thermometer place.

If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.