

# How to get rid of clicking noise in Pursuit.




**Warning:** Before you begin make sure the item is unplugged from the power source.


If your pellet grill is making a clicking noise, or a loud vibration, this can be caused by the auger motor. We have a free moving auger motor, and during shipping it can shift toward the outer shell. Following the next couple of steps will show you how to get rid of that noise.

If you have not done so already, undo the latch that holds the hopper lid down.



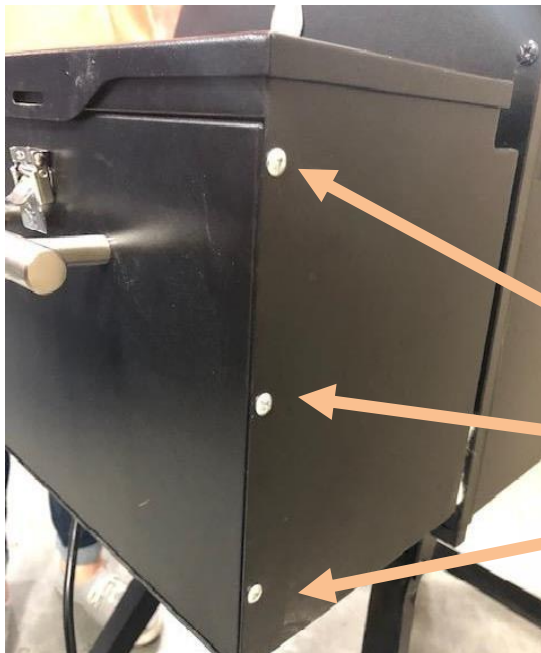

The next step would be to remove the side wall to get to the auger motor. To do this you would remove 3 screws from the front and back. Also, 2 screws on the bottom.

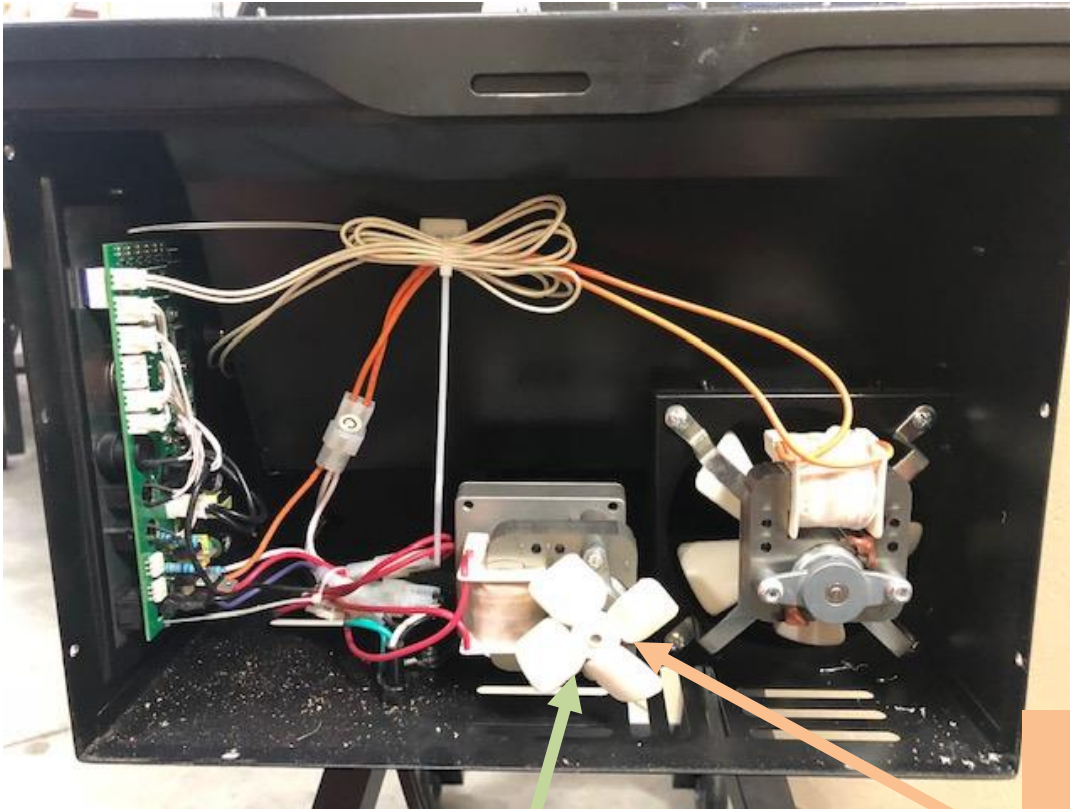

Please note: If you would like, the engineers did say with this smaller unit, the fan is not needed. You can just pull off the fan as well, this would also get rid of the clicking noise.

Once the screws are removed, that side wall will come fully out. From here we can see all the electrical parts. To get rid of the clicking noise you would just want to push the auger motor back toward the smoker. Some times it can move outward and hit the side wall.

If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at  
1-800-650-2433

**Note:** The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.