


# How to Change a Smoke Vault Valve



**Warning:** Before you begin make sure the item is removed from the propane tank.

**Make sure everything is turned off and disconnect the hose from your smoker. Then lay the smoker on it's back. This will give you access to the valve. Follow the next steps.**



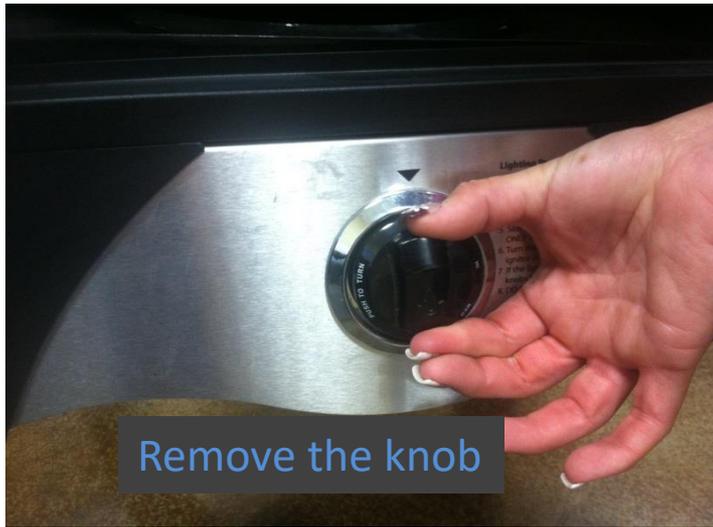

Remove the knob



Take the two screws out of the knob bezel



Take the bezel off




Remove the four screws from the burner drum.



Remove the burner Drum



Remove the two screws on the valve bracket.

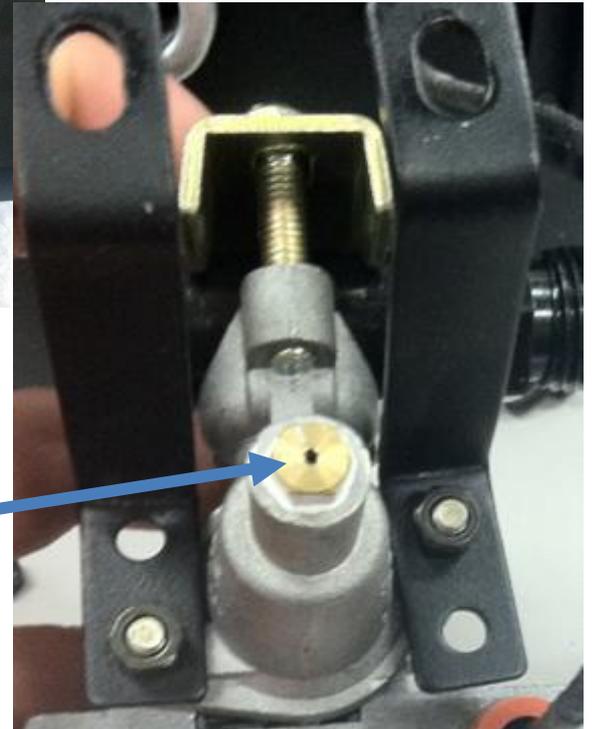

Remove the valve from the burner and drill out the valve orifice. To re install please follow instructions back towards the beginning. Please note, try and make sure the valve goes straight onto the burner to help prevent yellow flame.

If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at  
1-800-650-2433

**Note:** The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.