


How to change out the smoke vault handle.


Warning: Before you begin make sure the item is removed from the propane tank.



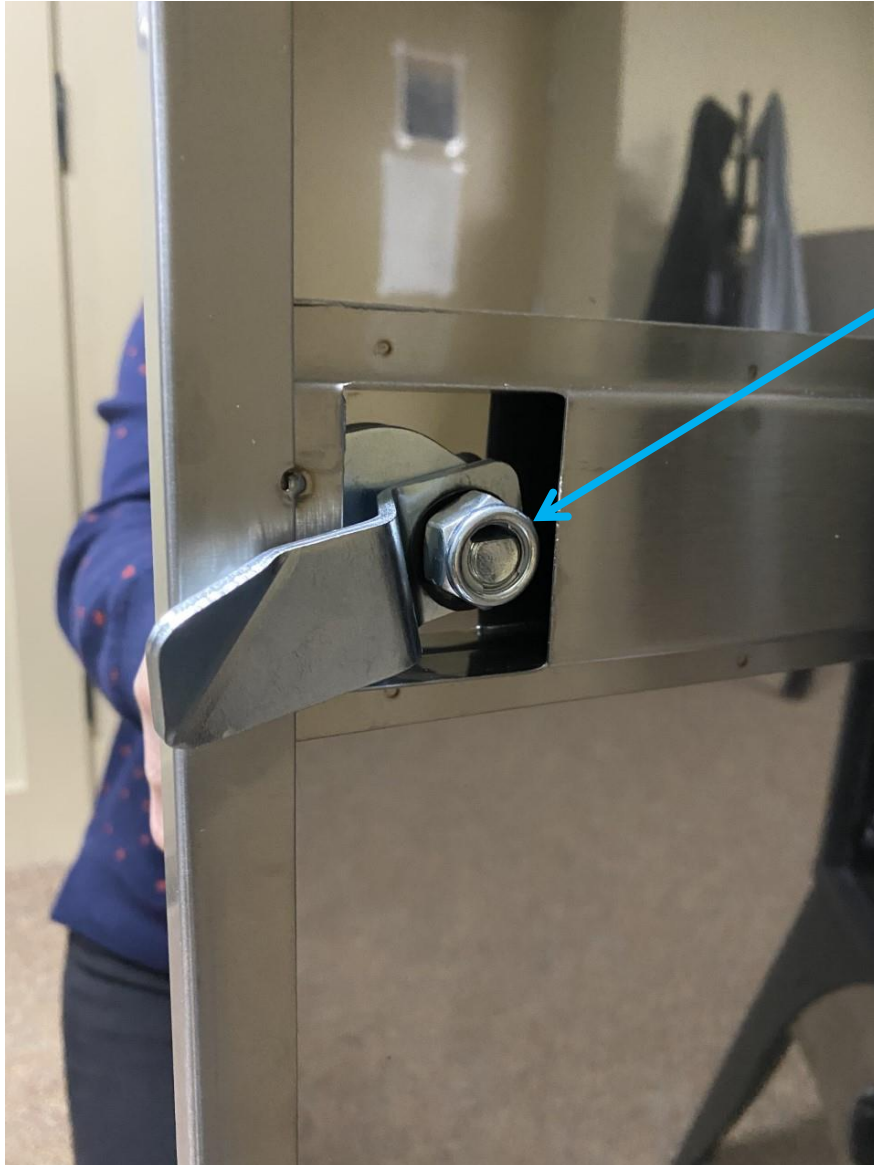

Take the nut off the inside of the handle assembly. It does take some force.

Take off the washer, metal latch, and second washer.

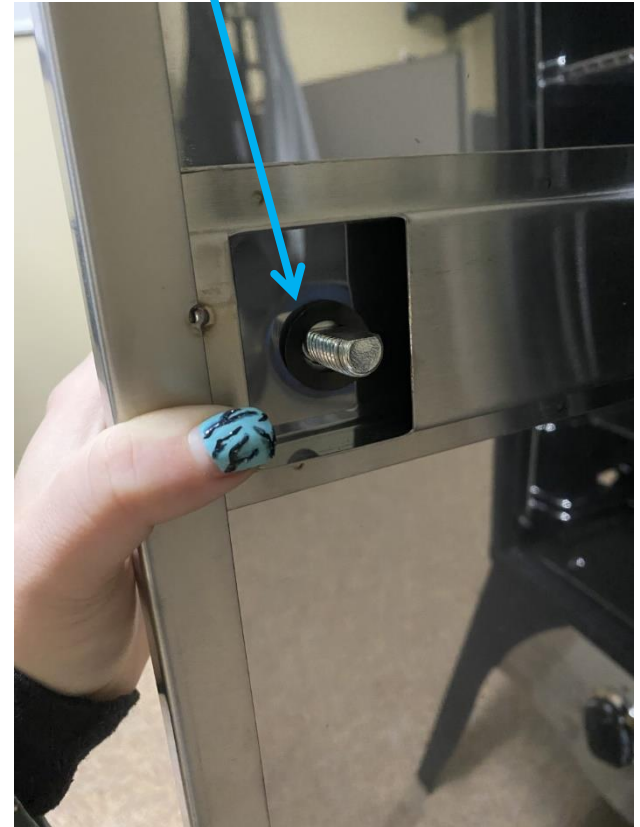

The handle will come out and
you can replace it.



If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.