

How to change out the valve in the PGSEAR




Warning: Before you begin make sure the item is removed from the propane tank.

First you will need to remove the knob from the valve. You will have to take out the set screw out from the bottom and than pull out.




Next we are going to remove the burner.

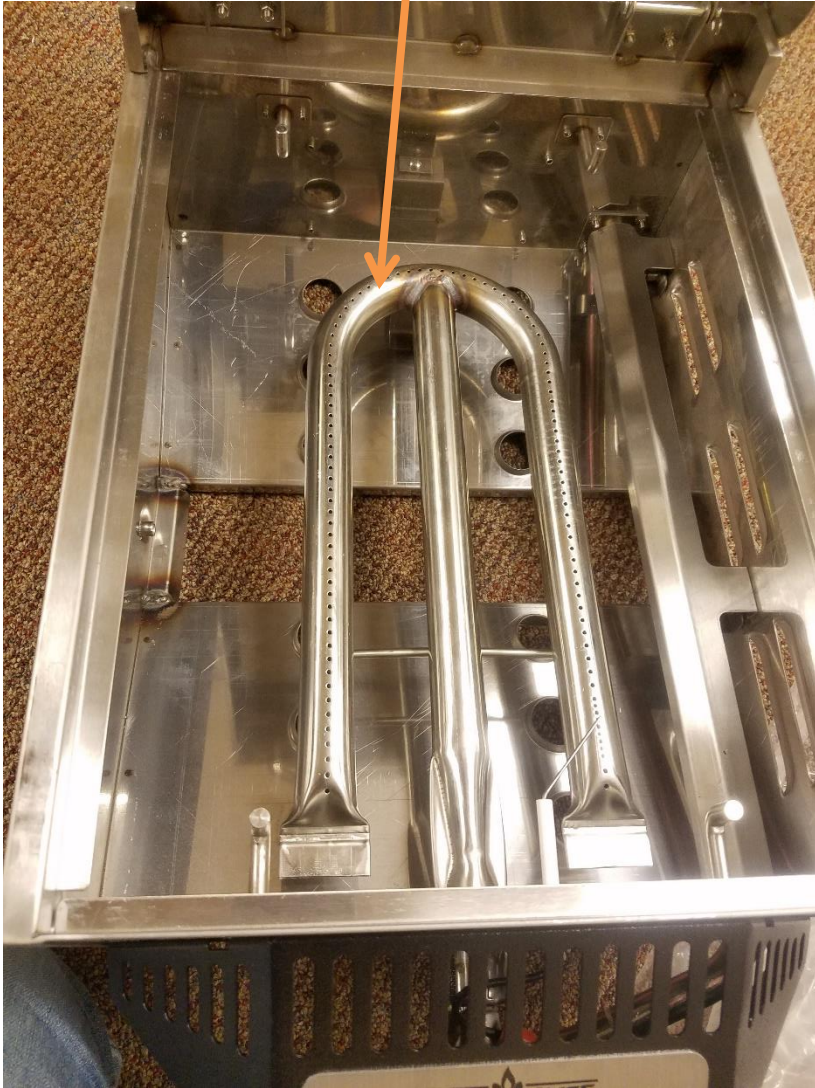

It is connected by this 1 screw. Once you take out the screw, the burner will pull out from the valve.





Then you will want to disconnect the valve from the manifold. There is one screw on the bracket holding it down. Please note, once you get the screw out, the bracket will have to be angled out.

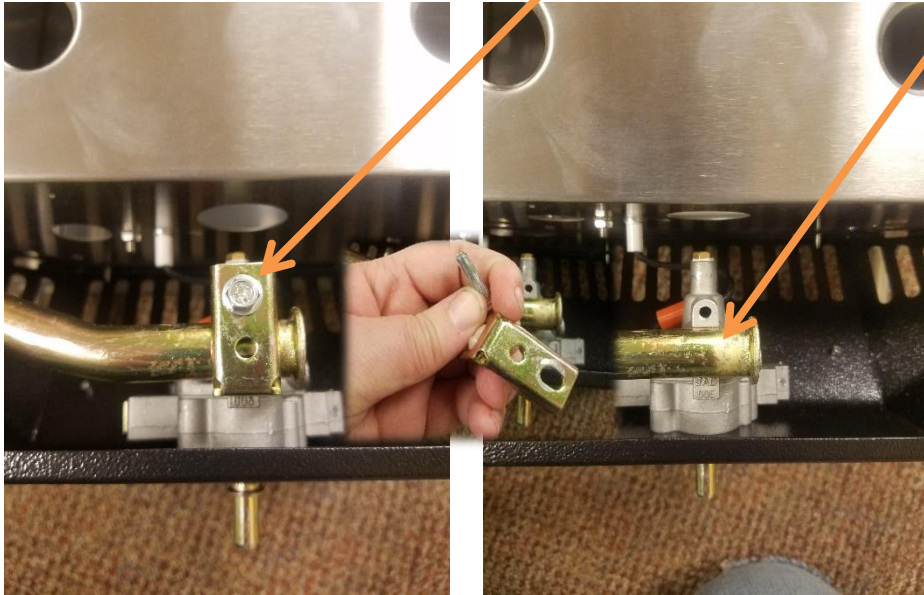

Once the bracket is removed, you can angle the manifold upward and out of the way.



You will want to unplug the Electrode from the igniter in the valve. You can move the orange protector up and it will pull out.

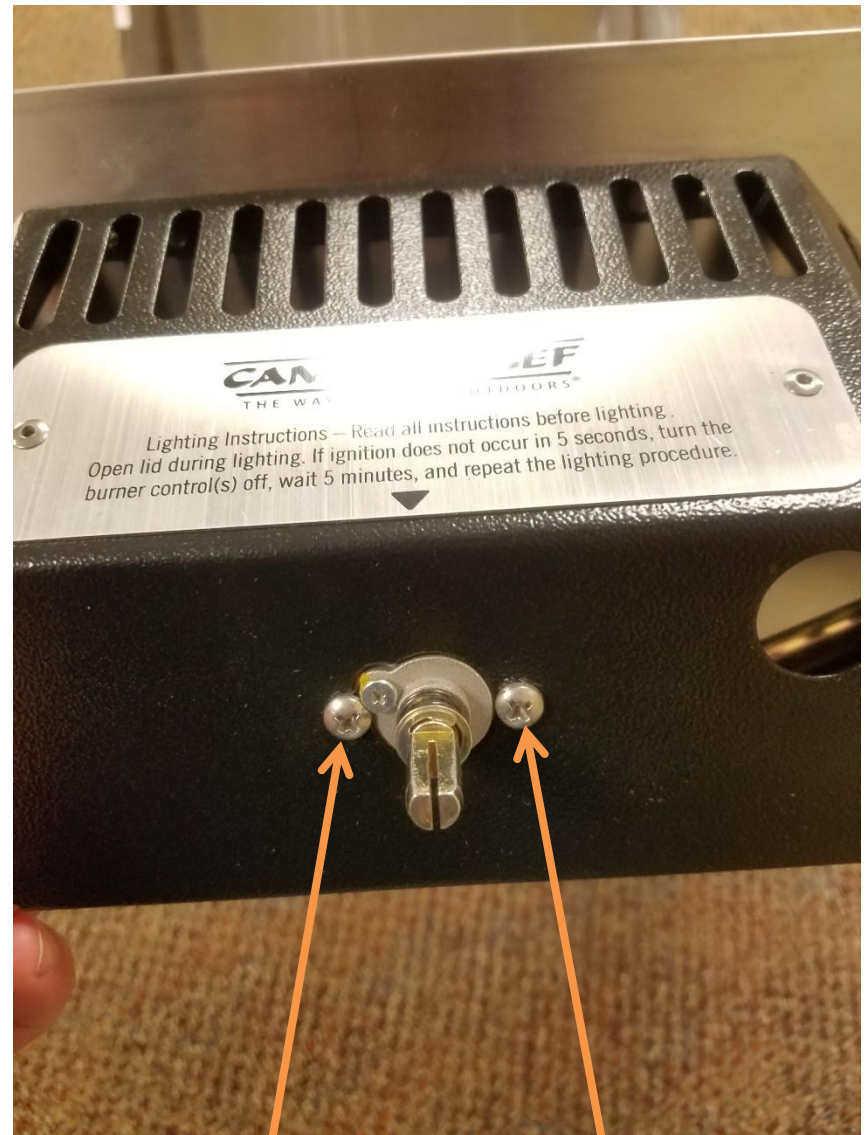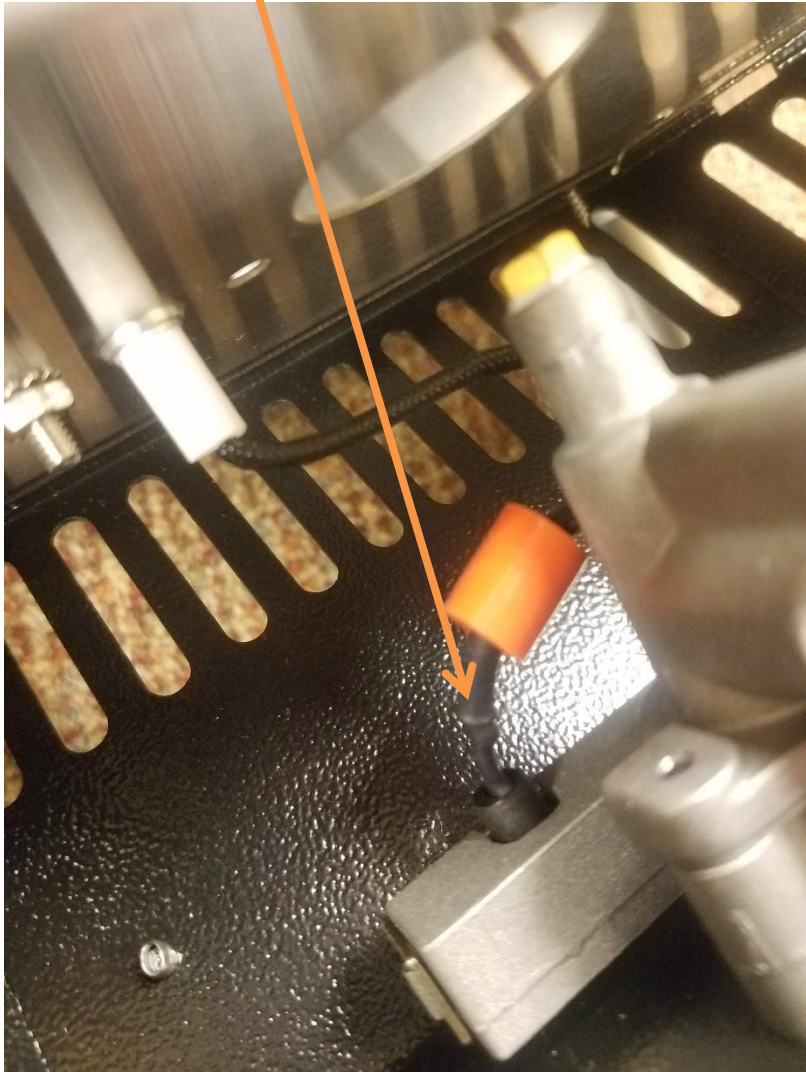

Next you will want to take out the 2 screws that are holding the valve to the main body.



After you get those 2 screws out, you will have to angle it out by pushing the valve into the hole the burner goes through, then you should be able to pull it out. Then you can put the new valve in and reassemble.

If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.