


How to change adjust the Vent in the PGSEAR

Warning: Before you begin make sure the item is removed from the propane tank.

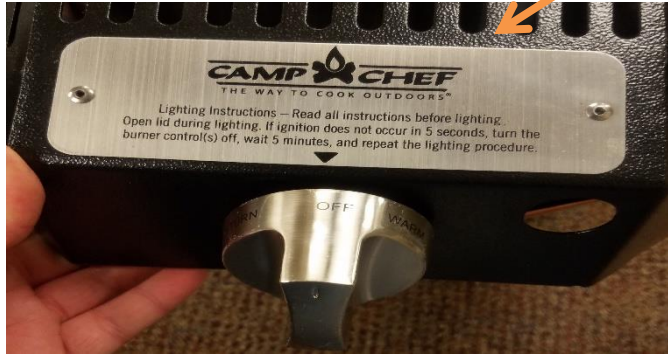

You will find the vent under the black encasing where the burner connects into valve.



You will then loosen the screw holding the vent down. That will allow you to adjust the vent.



If after troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.