


Warning: Ensure the propane tank is turned off, the regulator is disconnected from the tank and the sidekick is cooled before starting this process

3rd hole

4th hole

If the igniter is out of place it can be bent by hand into a better position. If the igniter will reach, place over the 4th hole, if not the 3rd hole will work.

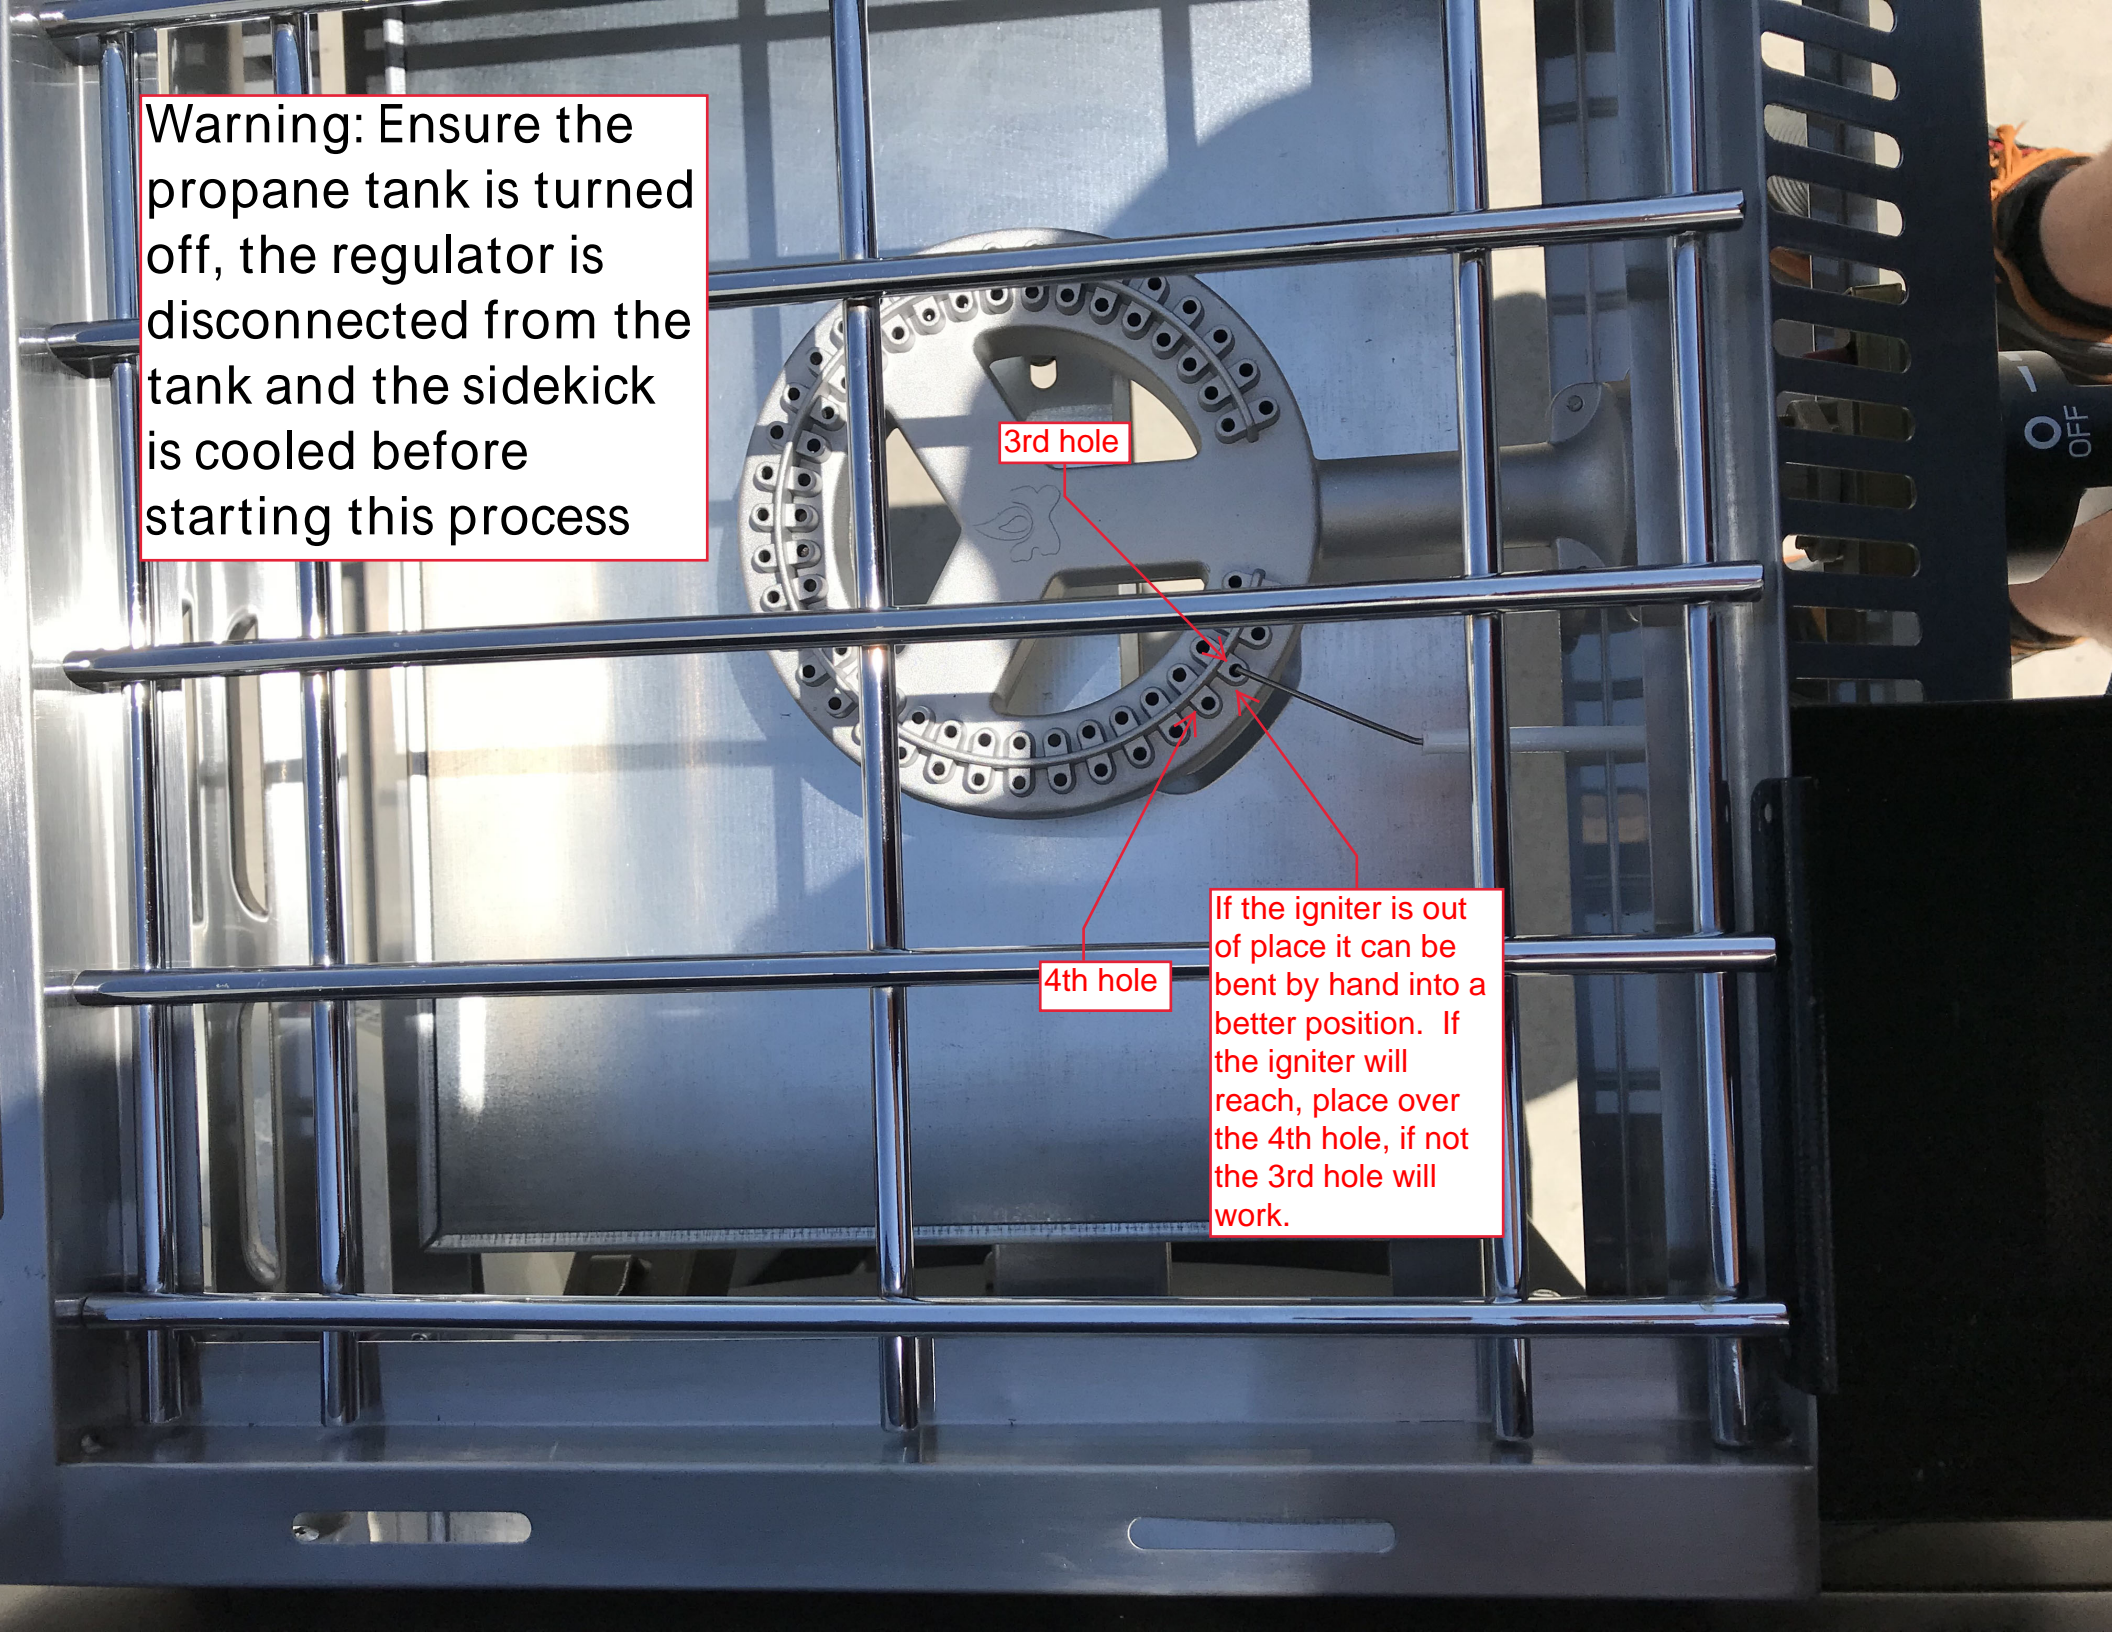

The distance between the burner hole and the igniter should be around 3/16 inch

