

How to replace a valve



Warning: Before you begin make
sure the item is removed from the
propane tank.




You will need to remove the black top from the oven, by removing the two screws on the back of the unit, as well as the screw on each side of the oven .





Lift the top off from
the back

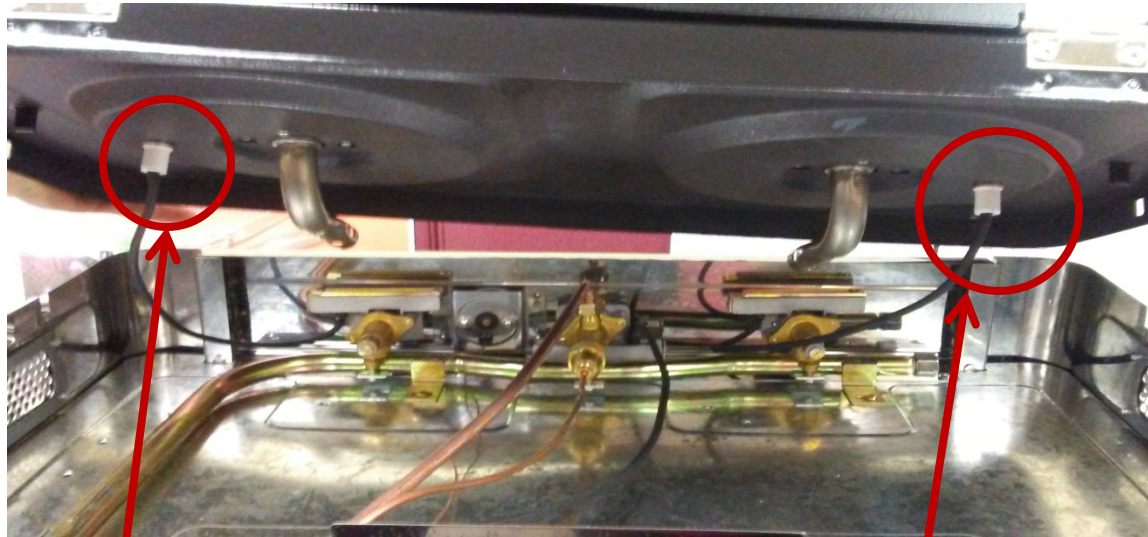


Pull the two igniter wires off the igniter electrodes.

Note: The wire will push back on the igniter, when it needs to be put back together.



Pull all three knobs off the front of the oven.


You should have two zip ties around the parts in the back, if you do, cut the ties.

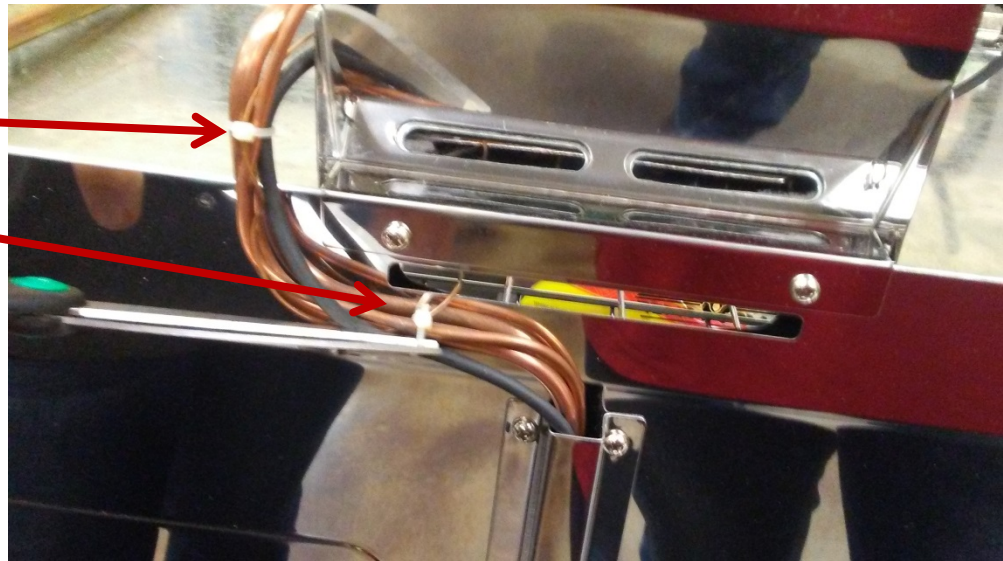


Remove the two covers from
the back of the oven



Remove the igniter wire
from the, igniter electrode.

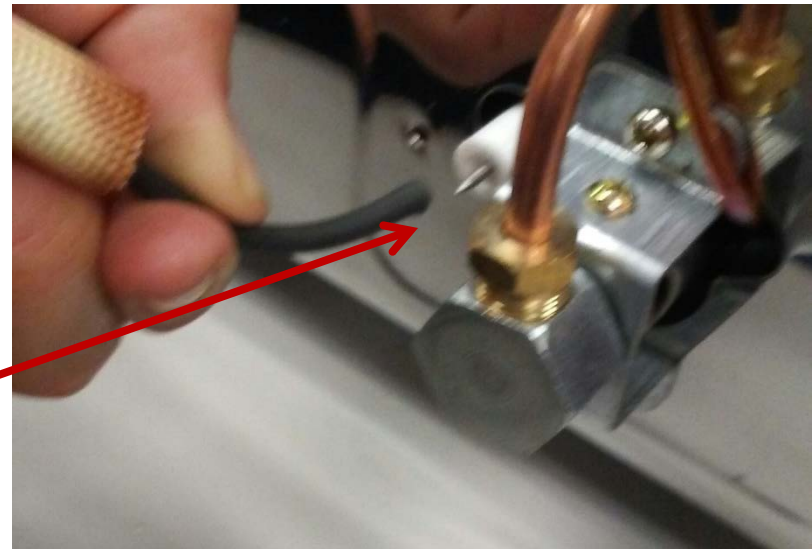


Remove the gas line out of
the oven valve

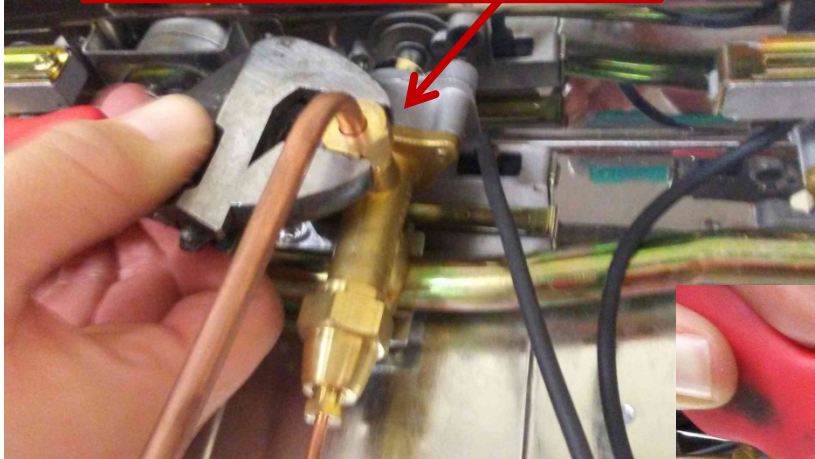

Remove the thermocouple
from the oven valve




Remove the screws holding down
the main gas line

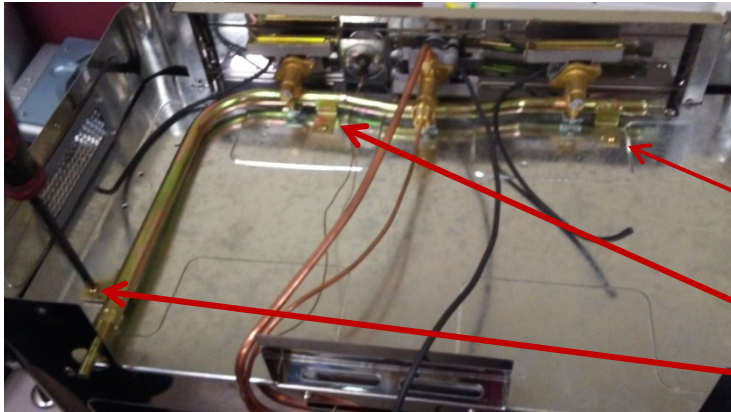



Remove the gas line
and valves from the
oven

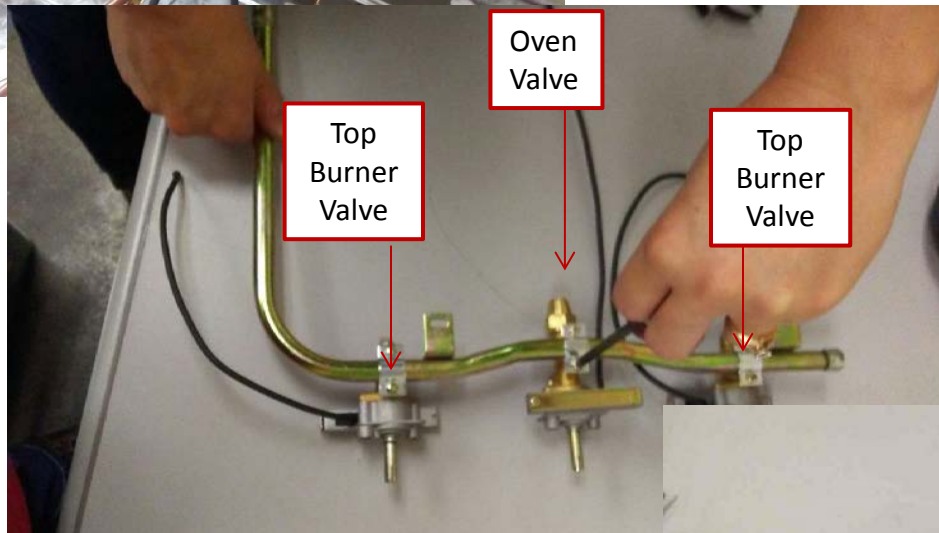

Remove the screws
from the bracket,
that is holding the
valve to the gas line

Remove the valve from the
gas line and replace



If you are still in need of help,
please contact our customer
service department. Our agents
will be happy to help. You can
contact them at
1-800-650-2433

Note: The Manufacturer is not liable for any
replacement parts, equipment, and/or injury
due to improper installation or modification.