


COVENT Oven
Ignitor
Replacement




1. Remove 4 Philips head screws securing top burner assembly to main oven.




2. Lift assembly from the back, remove burner tubes from valve orifices.

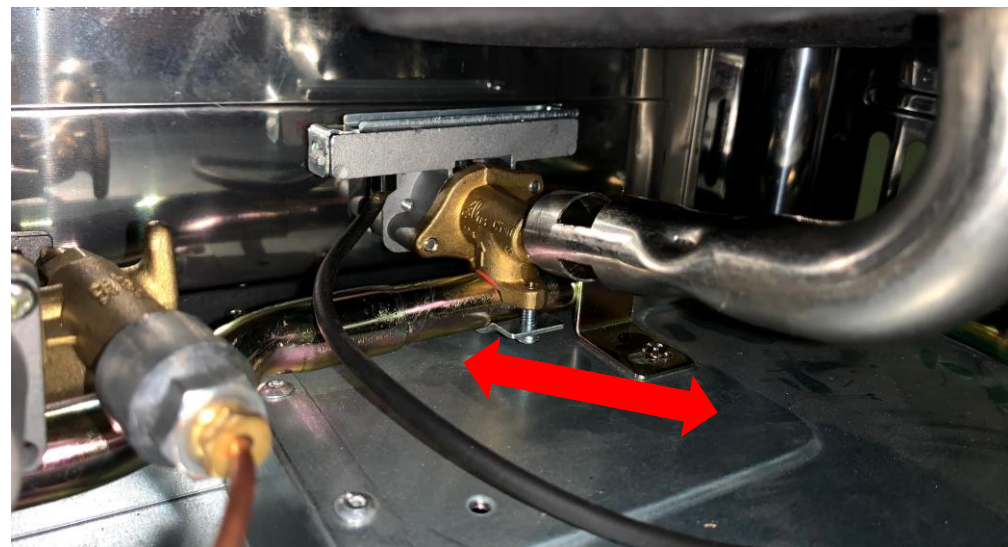

3. Disconnect Wires from ignitors and place top oven assembly aside.

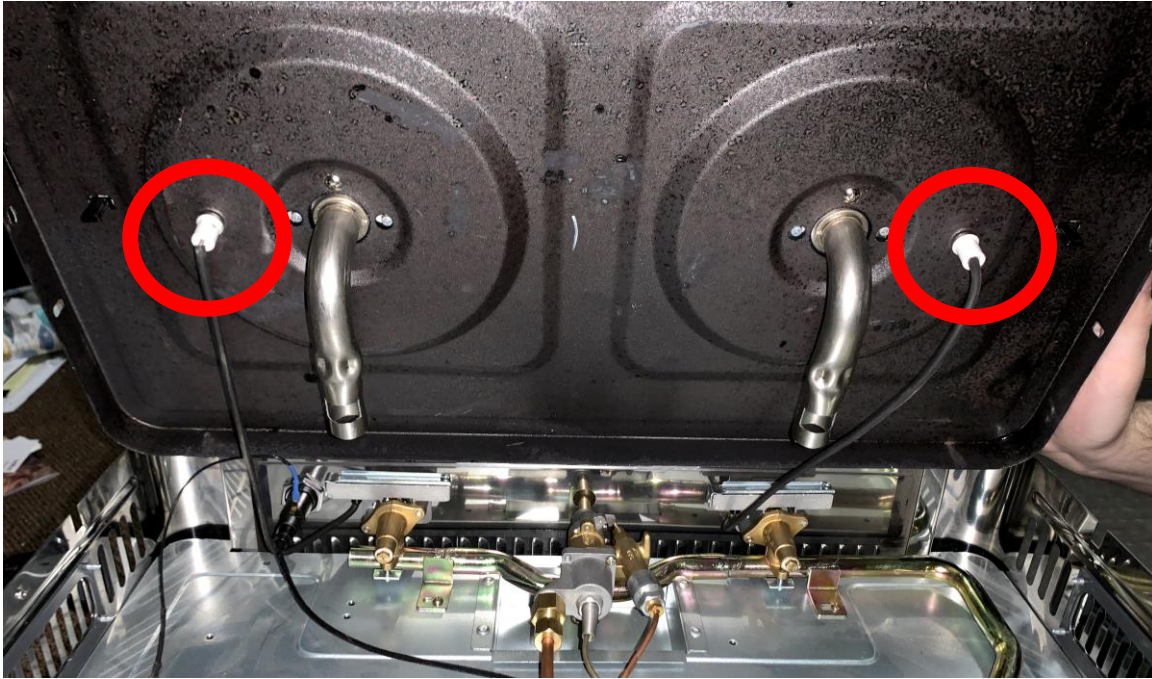

4. Disconnect ignitor ground wire

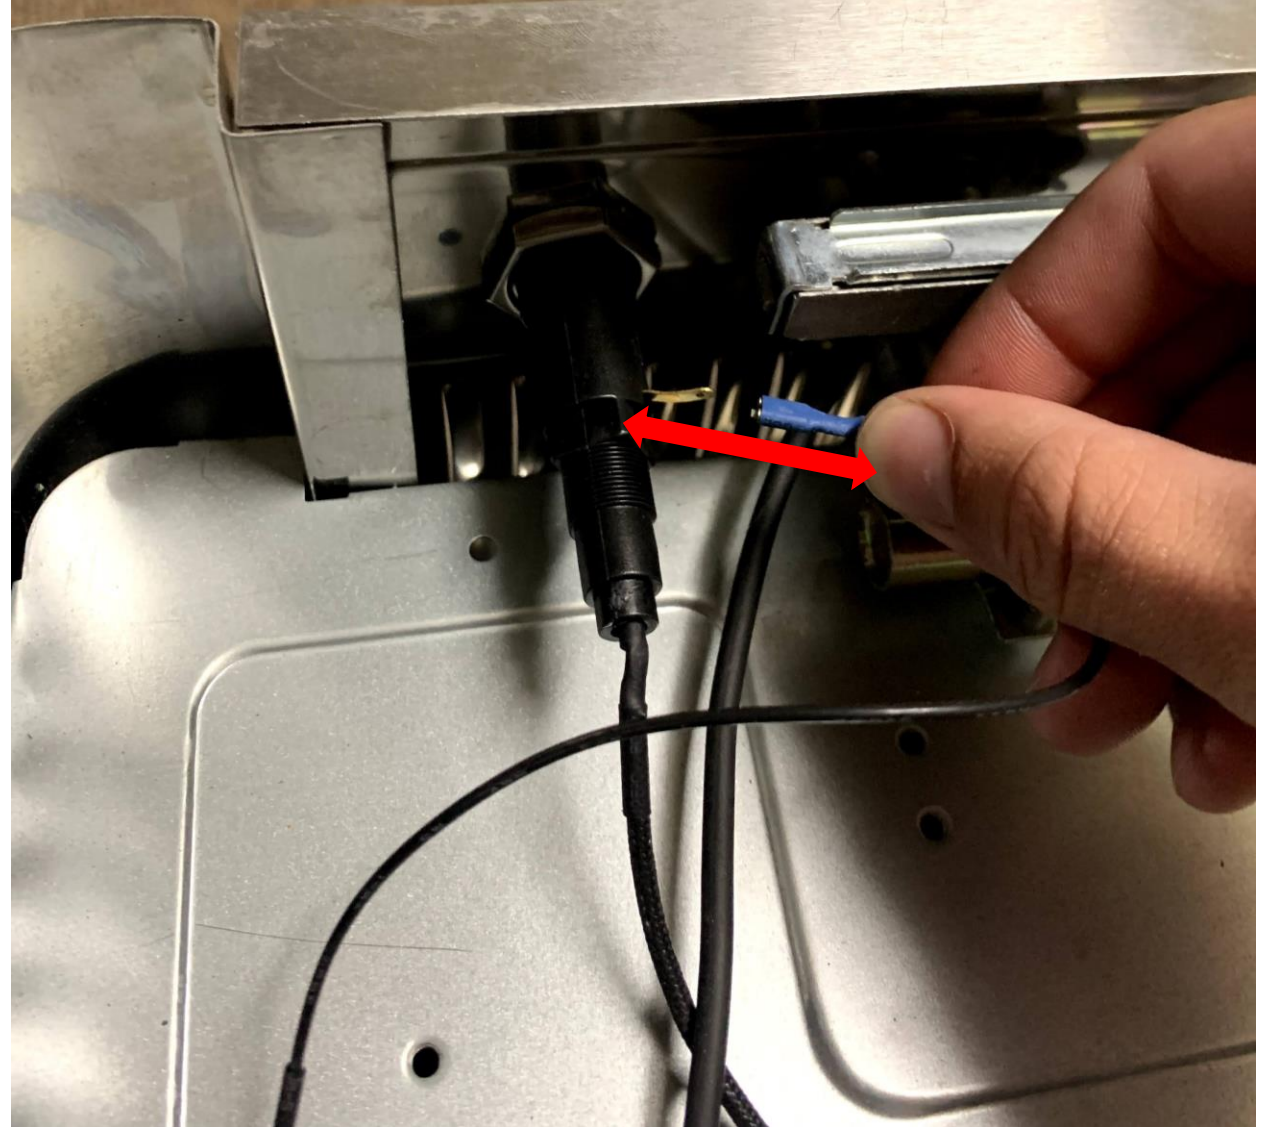




5. Remove push ignitor nut.

6. Bend copper ground connection tab down to remove nut and button from the oven



7. Pull through the front side of oven



8. Remove 6 Phillips head screws for connection guard


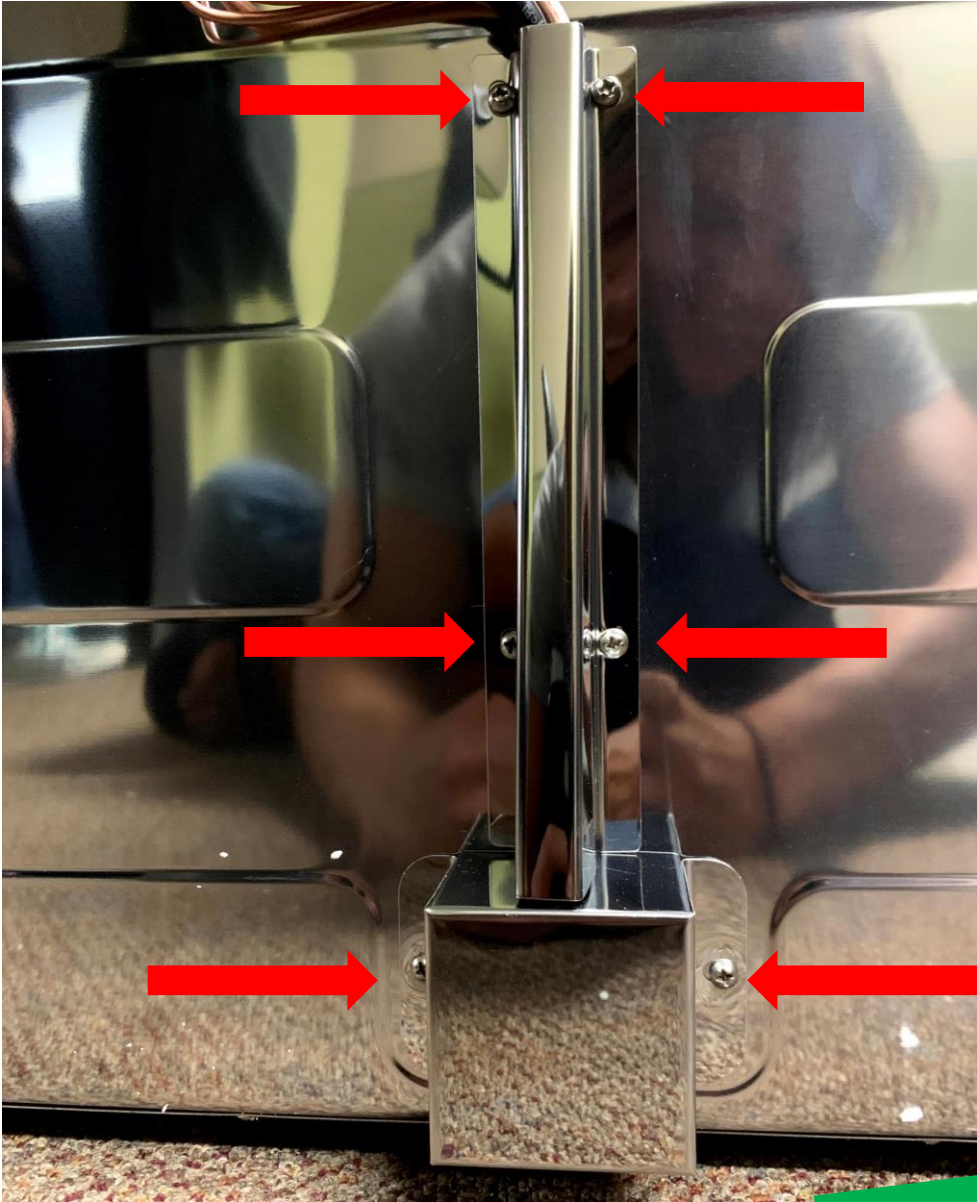


9. You may need to remove 3 Phillips head screws for orifice bracket for more clearance.

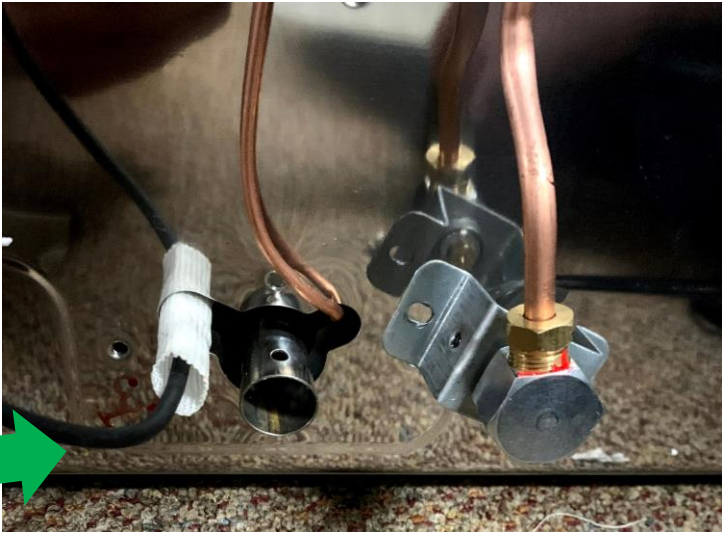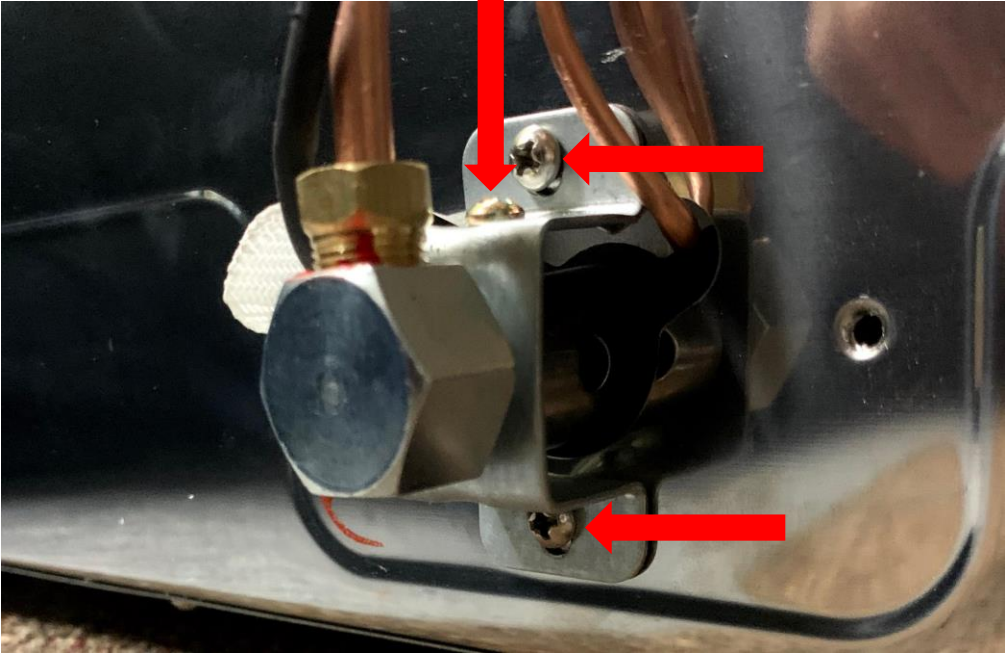

Ignitor Wire

10. Remove Racks and Heat Deflector to gain access to burner, ignitor, and thermocouple.

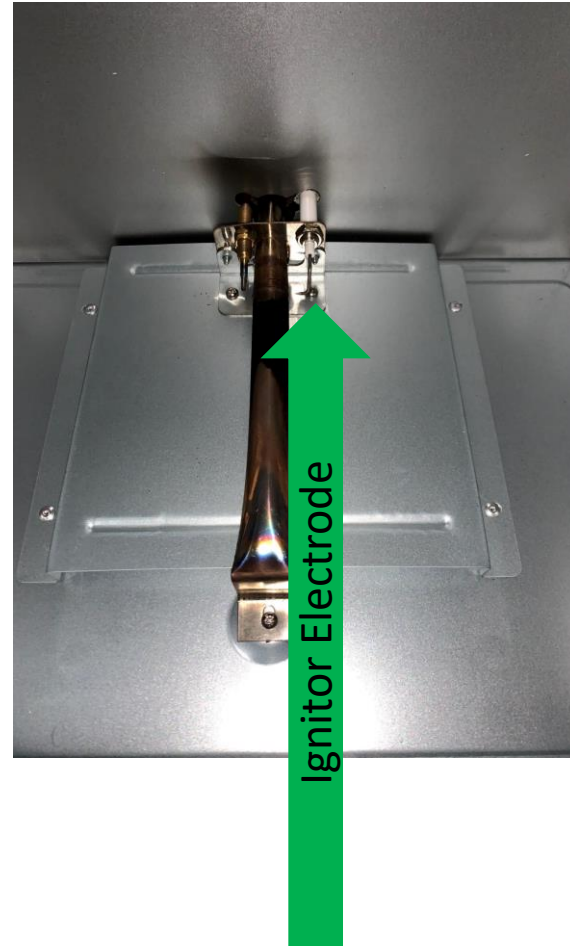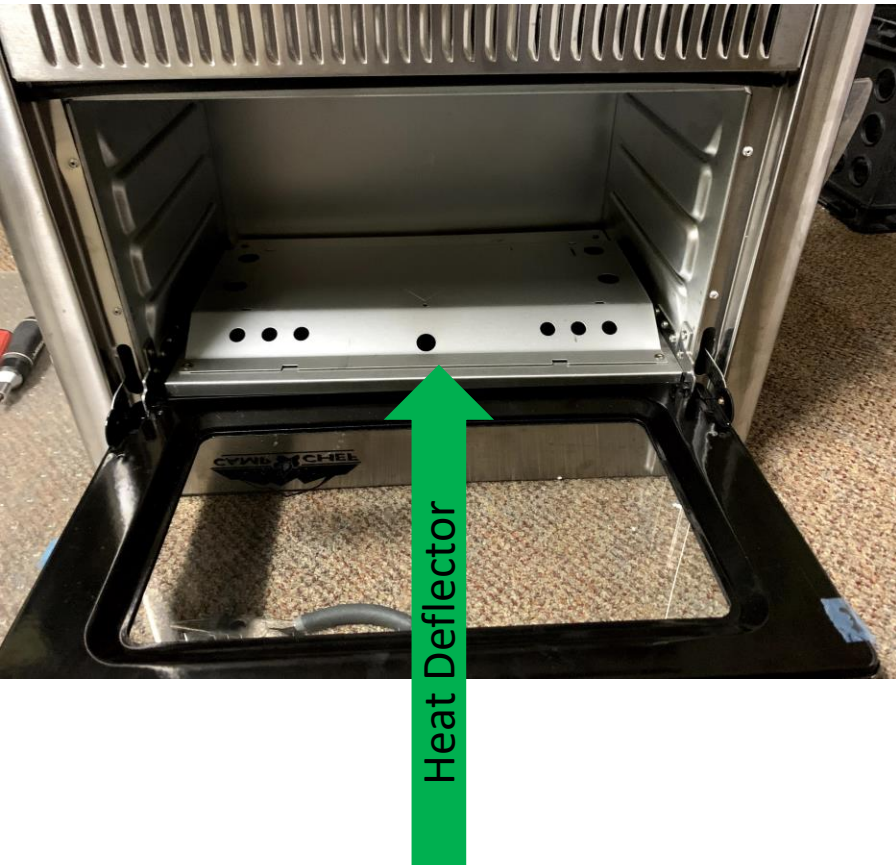

11. Remove nut for ignitor and take ignitor out.



If you have any questions or concerns, please contact
Customer Service center @ 800 650 2433 Monday -
Thursday from 8AM to 8:30 PM MST. Then Friday between
8 AM and 5 PM, MST