


COVENT


Thermocouple Replacement




1. Remove 4 Philips head screws securing top burner assembly to main oven.

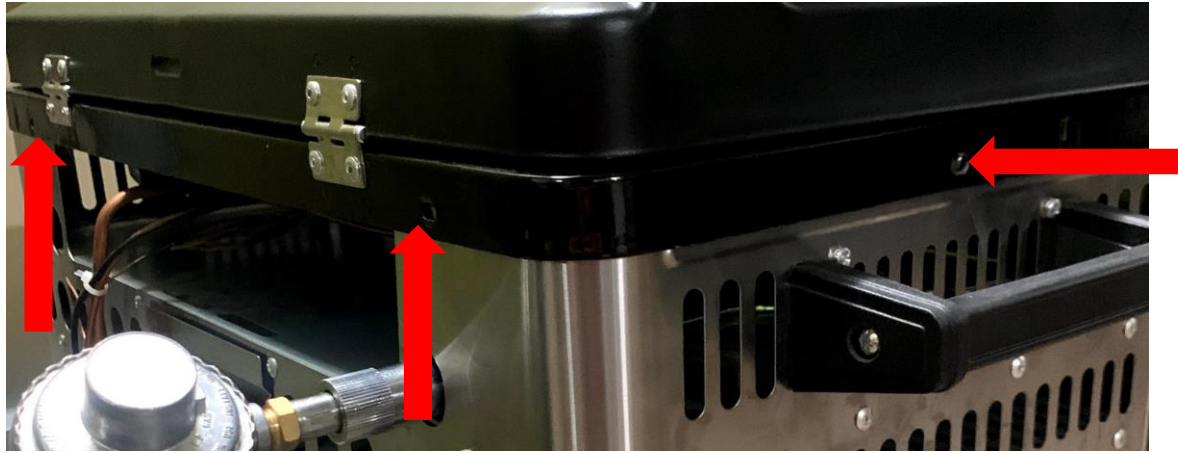


2. Lift assembly from the back, remove burner tubes from valve orifices.

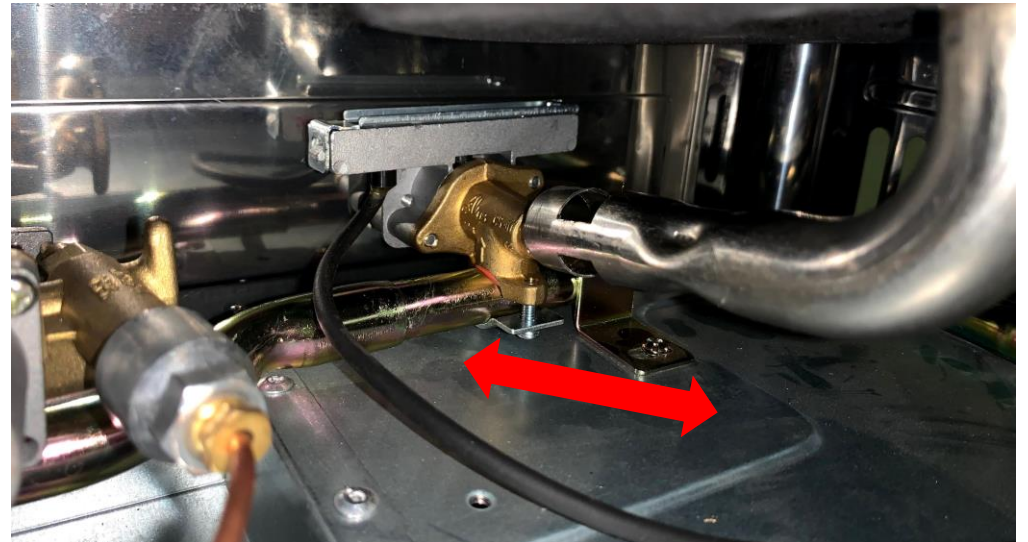

3. Lift up Top Burner Assembly and disconnect black ignitor wires

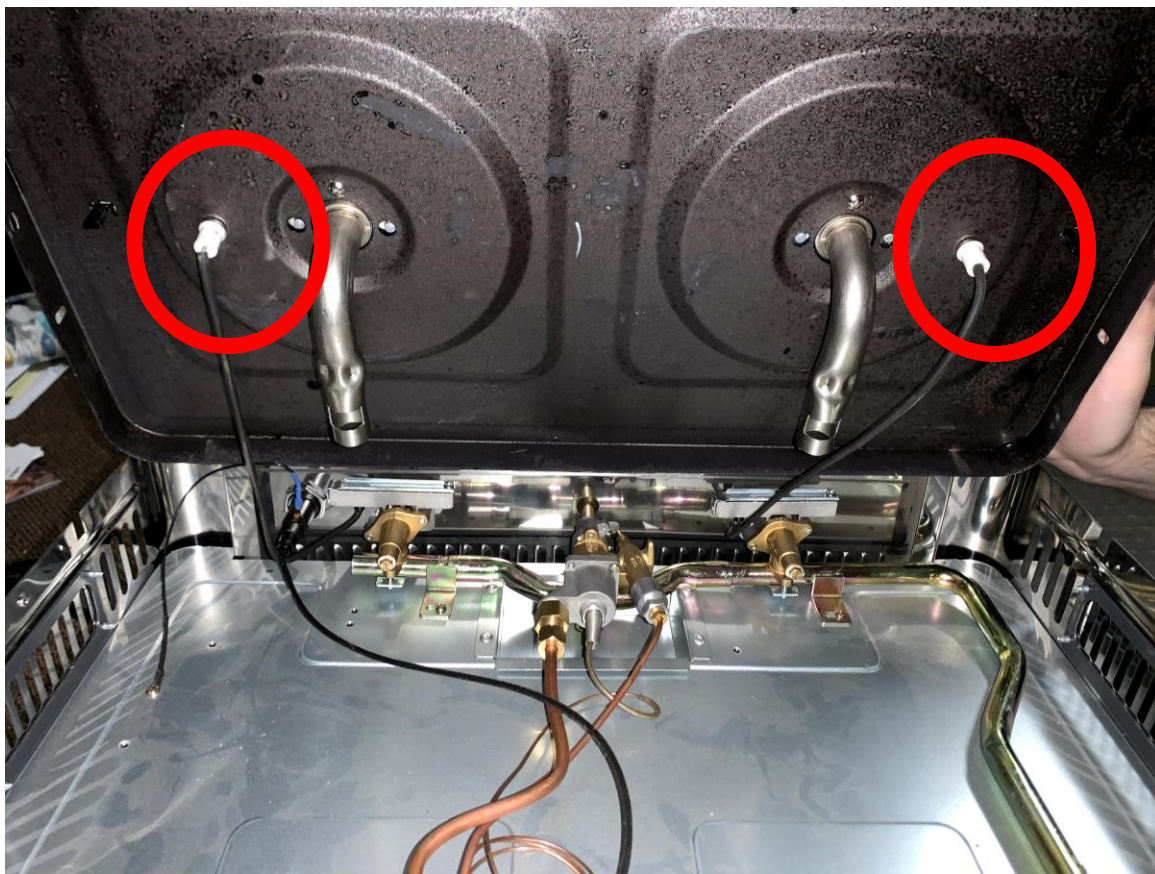


4. Unscrew Thermocouple Connection

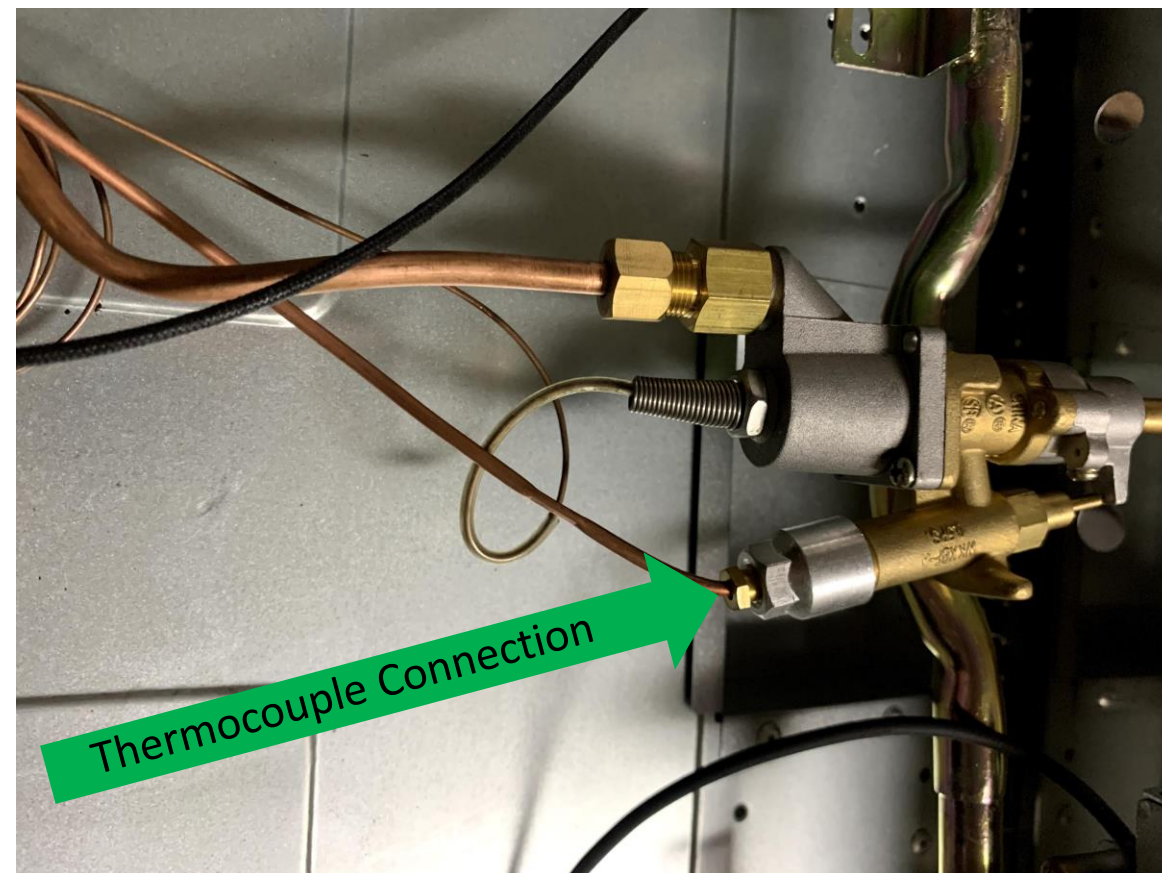


5. Remove Racks and Heat Deflector to gain access to burner, ignitor, and thermocouple.



6. Remove 6 Phillips head screws for connection guard

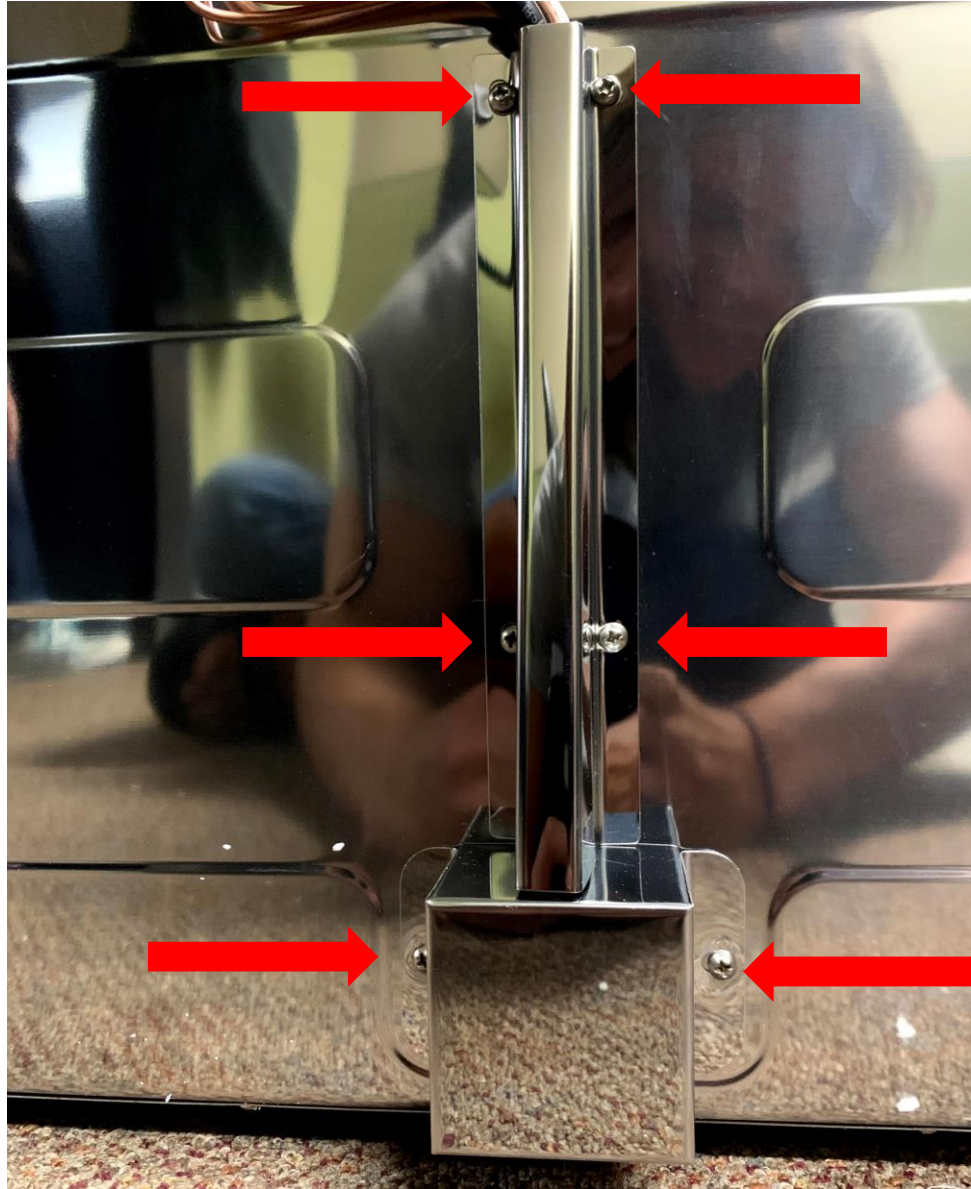


7. You may need to remove the orifice bracket from burner for more clearance. (3 Philips head screws)

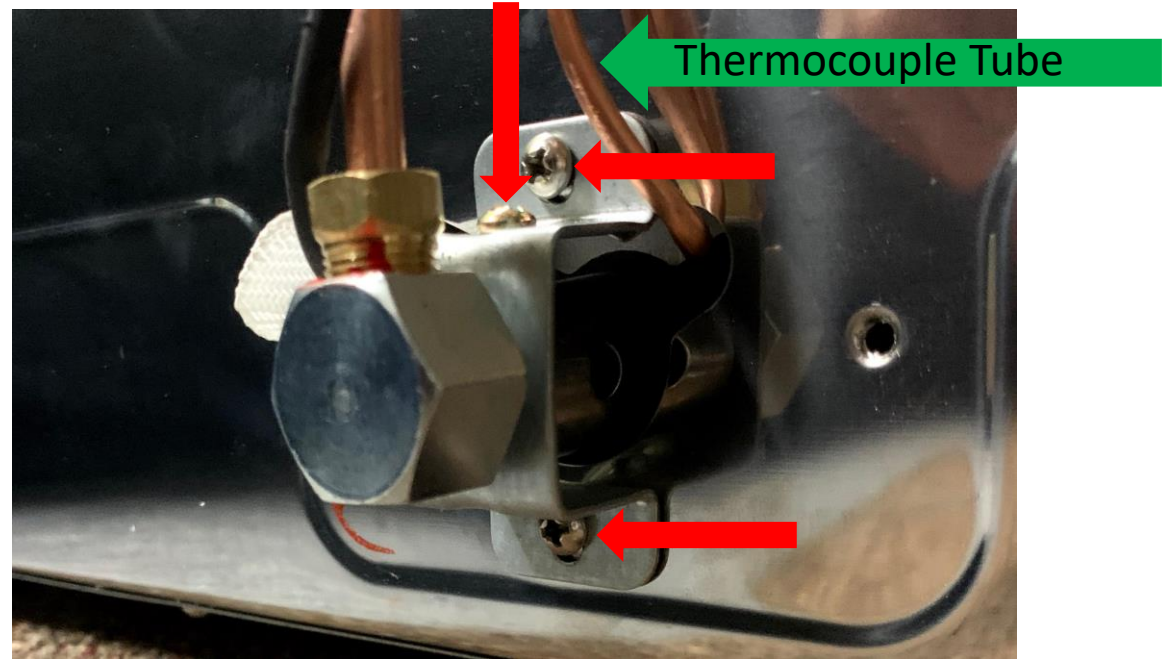

8. Unscrew thermocouple nut

*When installing new Thermocouple, you will need to bend the copper tube like the old thermocouple. Verify the tube isn't kinked or crushed. *

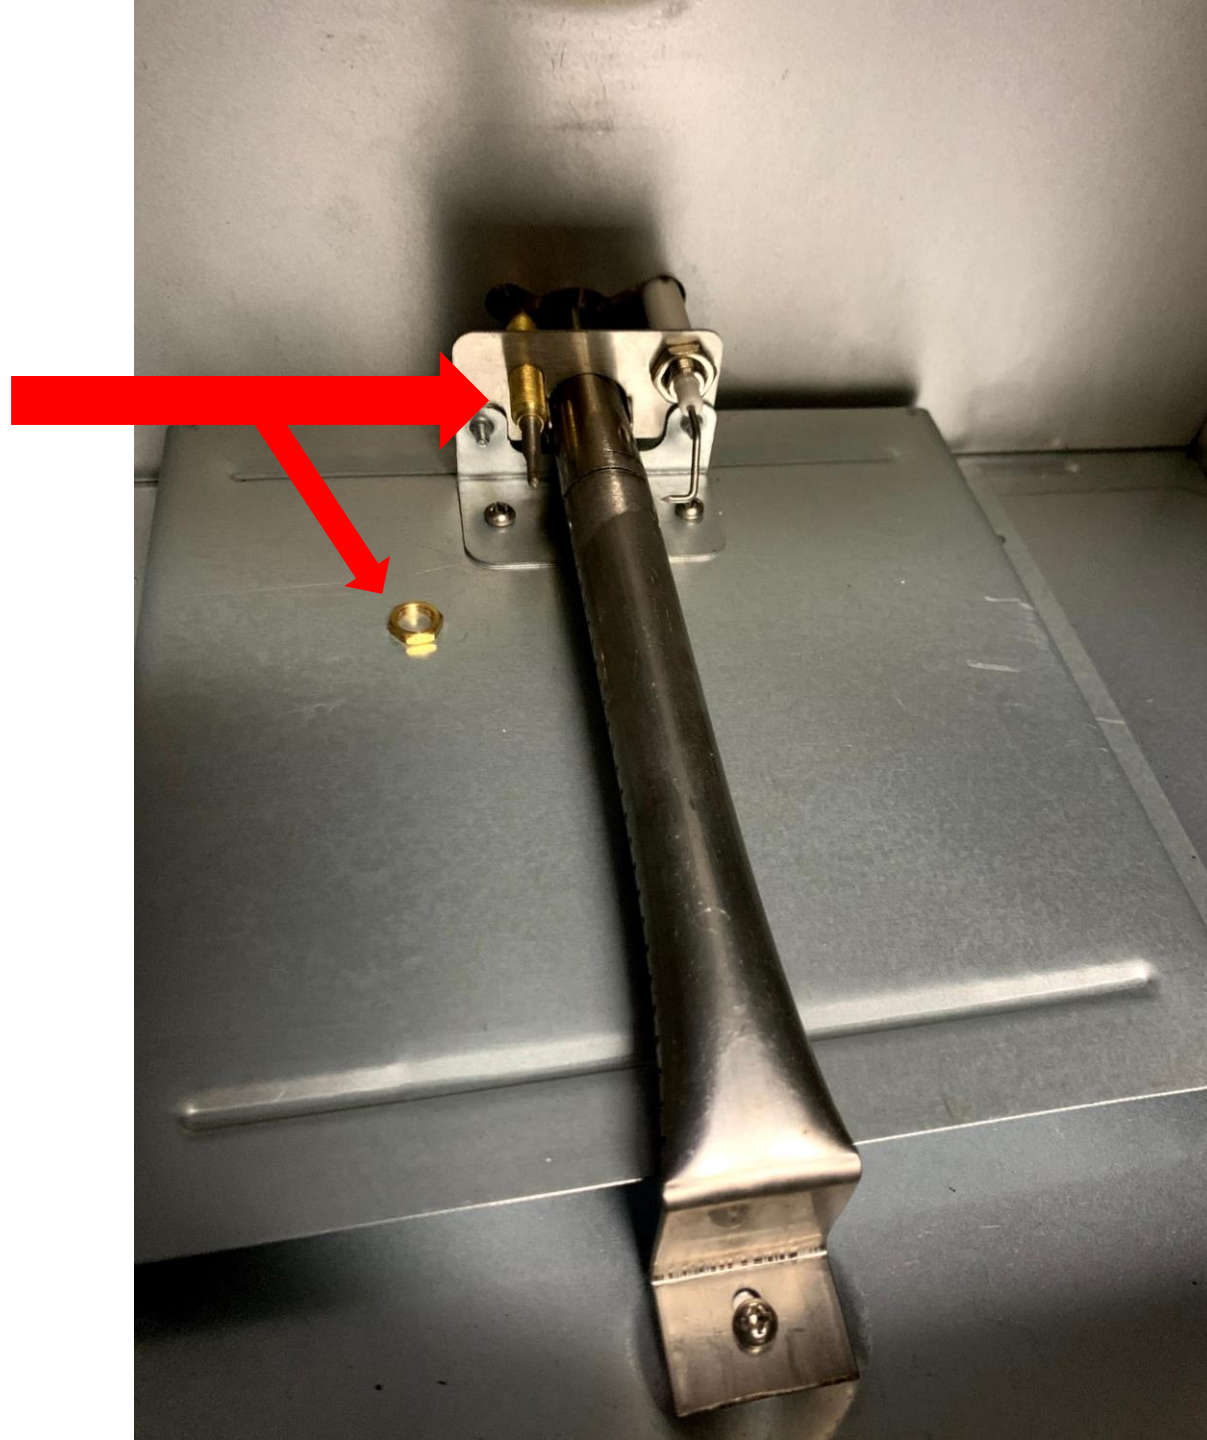

If you have any questions or concerns, please contact
Customer Service center @ 800 650 2433 Monday -
Thursday from 8AM to 8:30 PM MST. Then Friday between
8 AM and 5 PM, MST