






1. Remove Qty (2) bolts from rear right leg.□
Z. Install the propane tank bracket as shown using existing hardware from pellet grill. □
3. Remove cast iron grate, flavor screen, and heat deflector from the sear and set aside□
4. Remove side shelf from grill.
5. Install sear as shown using the existing shelf hardware from grill.
6. Level the sear using the leveling screw. (Note: Make sure the lid does not interfere with the rivits on the side of the grill.)
7. Install heat deflector as shown.□
8. Install flavor screen as shown with finger hole at the back. □
9. Install cast iron grate as shown.□
⊔ 10. Install handle as shown using the supplied hardware.□
⊔ 11. Install knob and tighten the set screw in the bottom with the allen wrench that is included.□
□ 12. Install grease tray.□

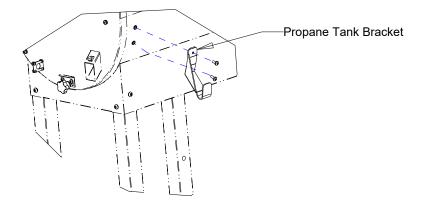


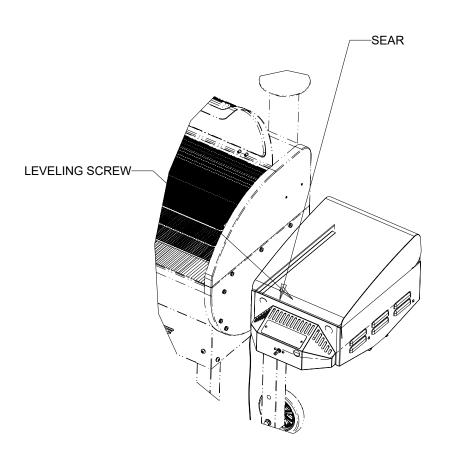


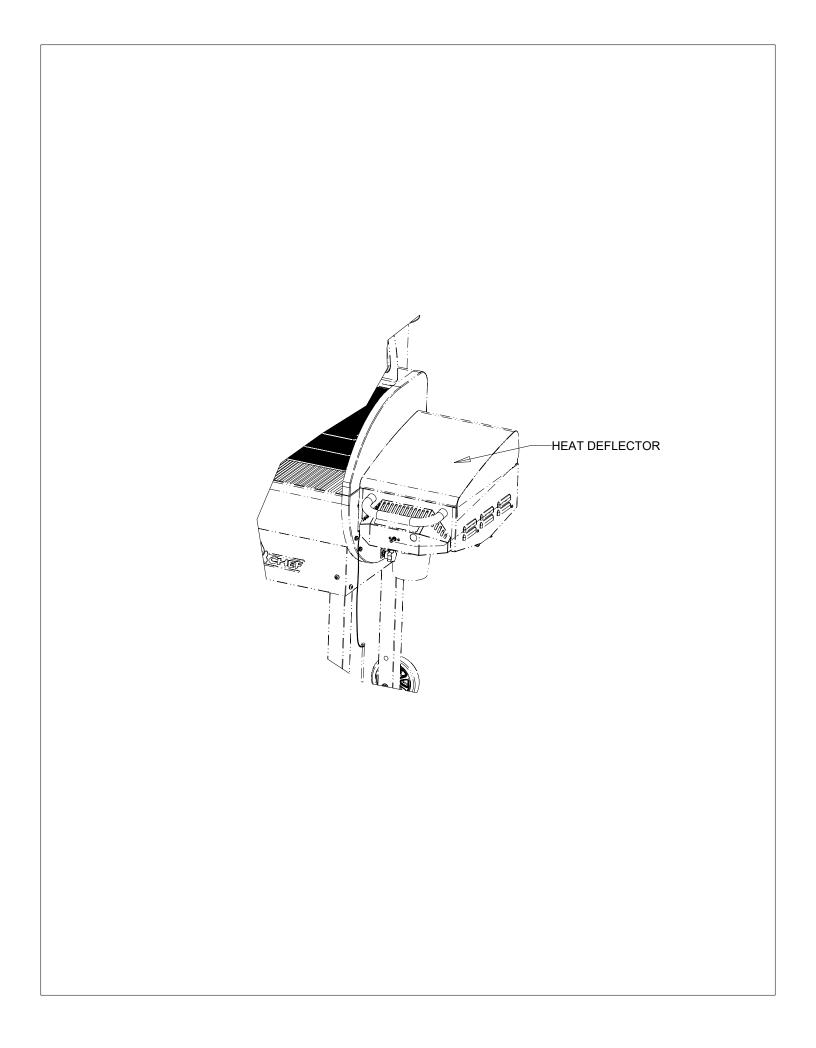


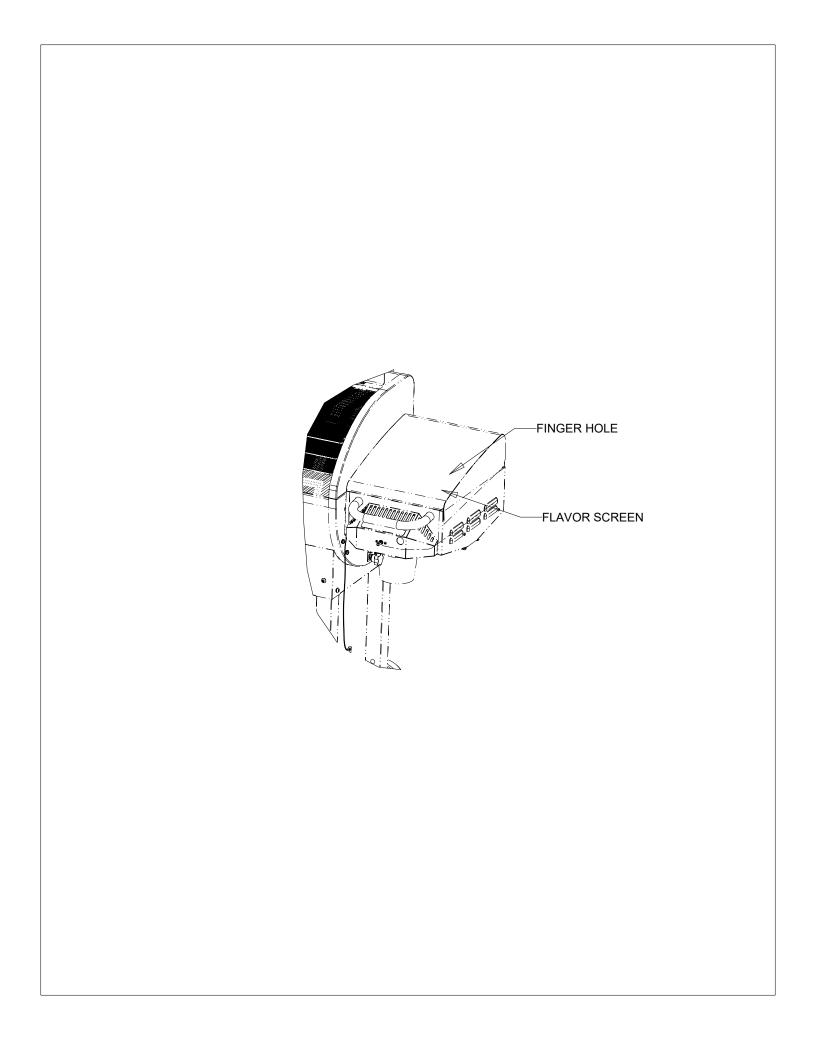


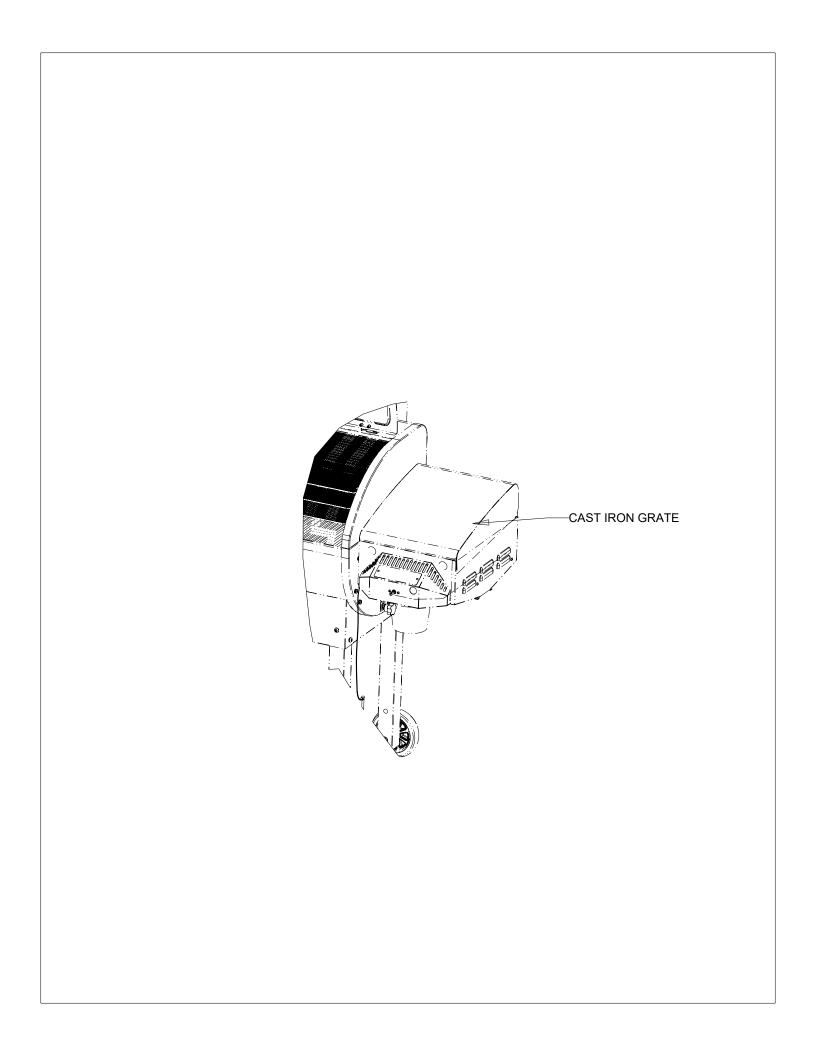


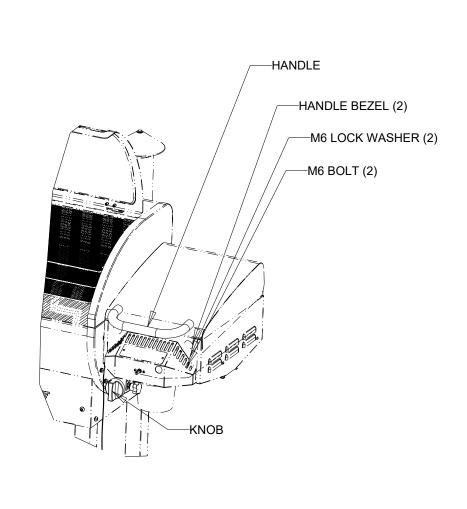


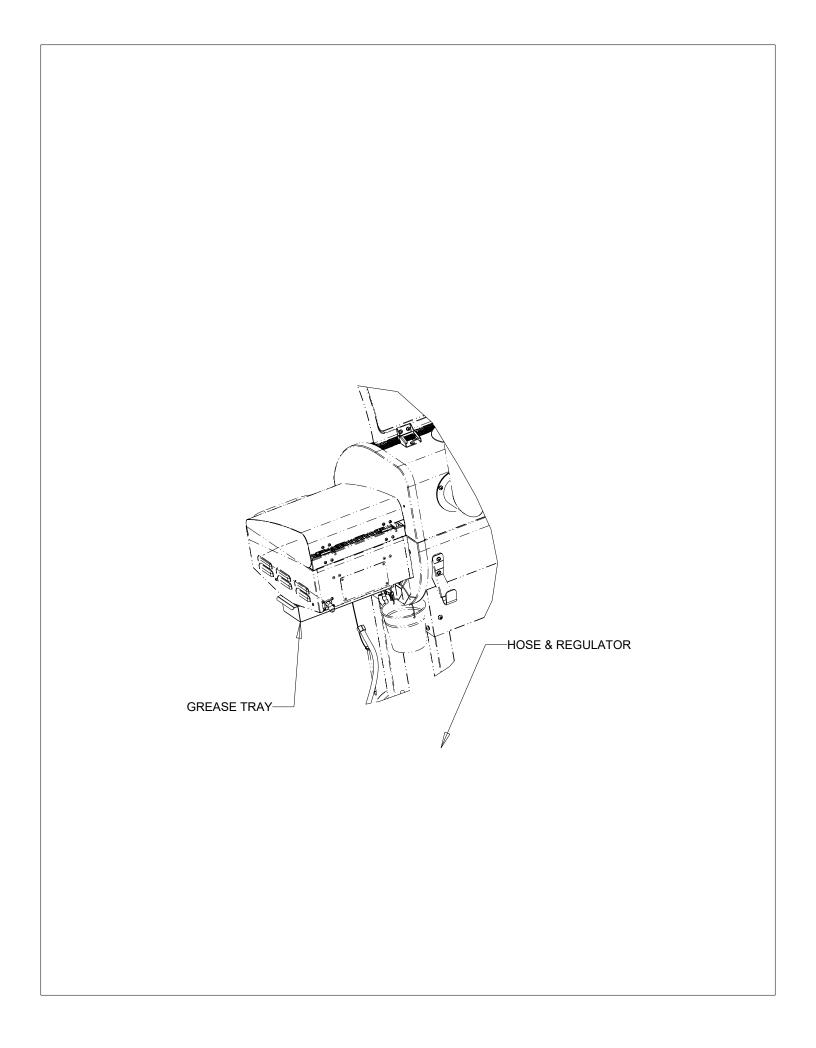


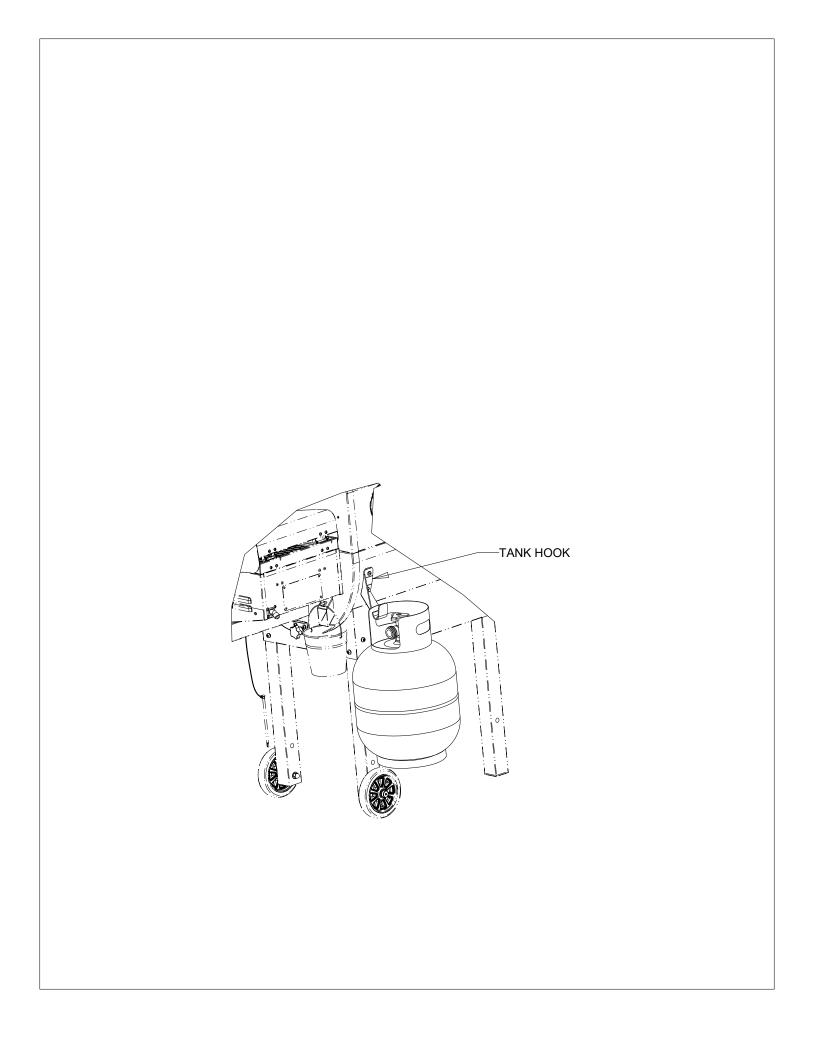

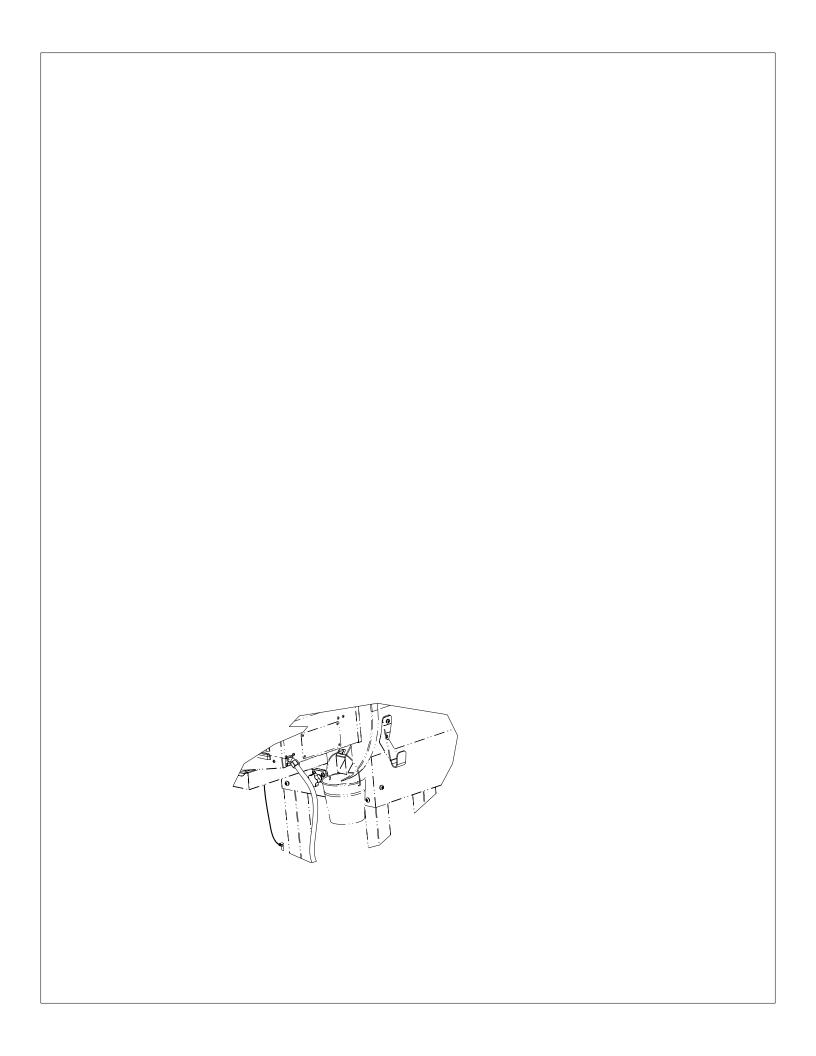

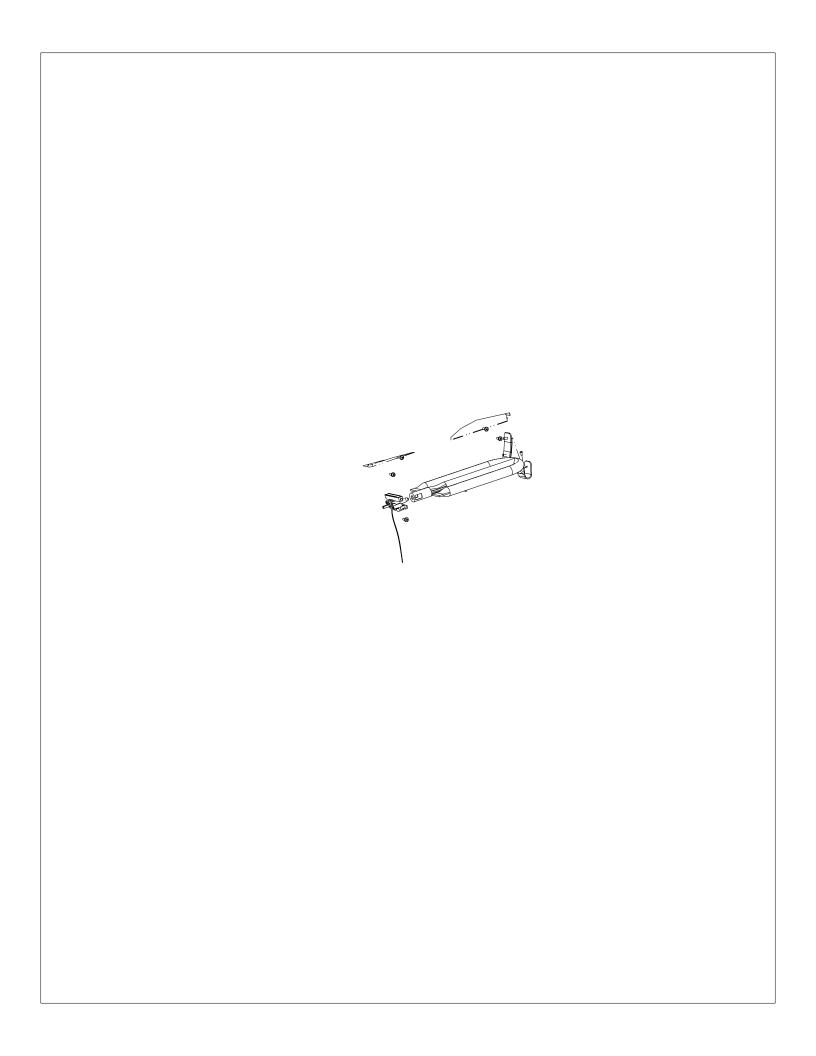

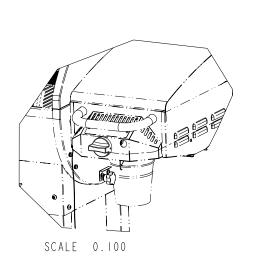

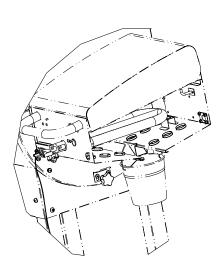

SCALE 0.100

