




PATIO CART




PATIO CART ASSEMBLY INSTRUCTIONS
MODEL PZCART

READ ALL ASSEMBLY INSTRUCTIONS BEFORE BEGINNING THE ASSEMBLY PROCESS.


1. Place cart upside down with the front facing forward. Install the 4 legs as shown using M6 x 12MM Button Head Screws and 6MM lock washers. Note that the rear legs use 4 screws each and the front legs use 2 screws each. Do not tighten hardware at this point.

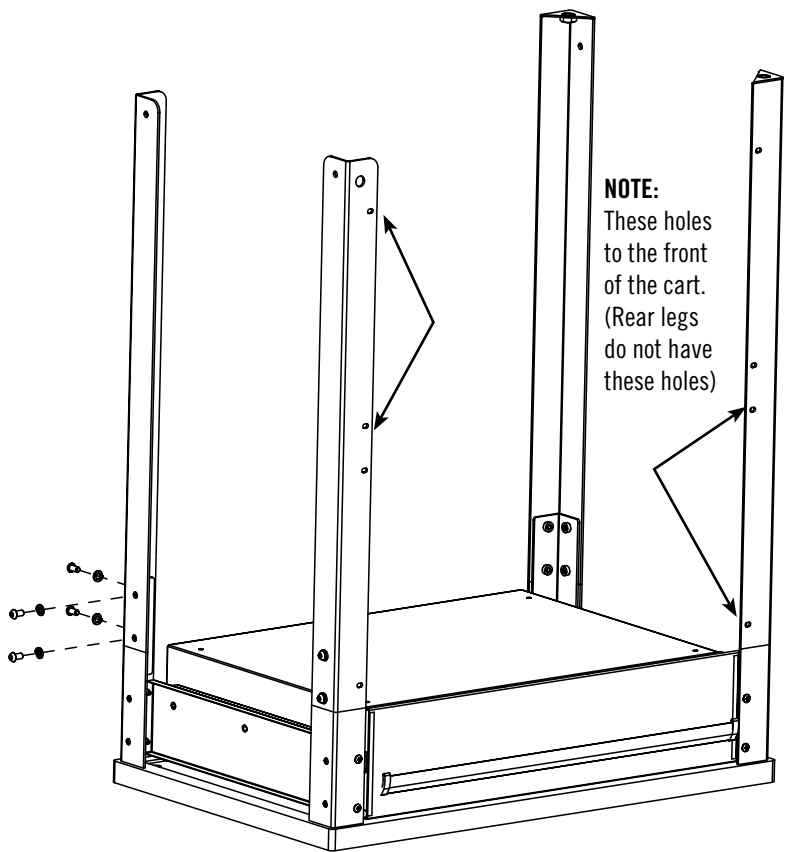

2. Install the top panel using the supplied screws as shown. Do not tighten hardware at this point.
3. Install the bottom panel using the supplied screws as shown. Do not tighten hardware at this point.
4. Install the bottom tray using M6 x 12MM Button Head Screws and 6MM lock washers as shown. Do not tighten hardware at this point.
5. Tighten screw indicated before assembling wheels.

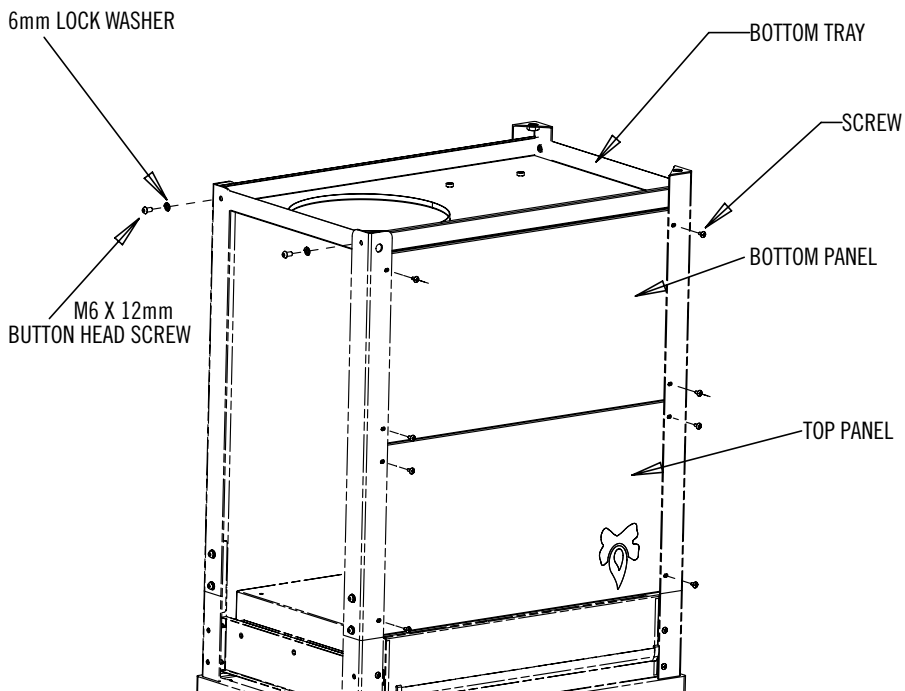


6. Install the axle through the cart and assemble wheels. Install axle nuts and tighten.
7. Install wheel caps onto wheels
8. Install leg levelers

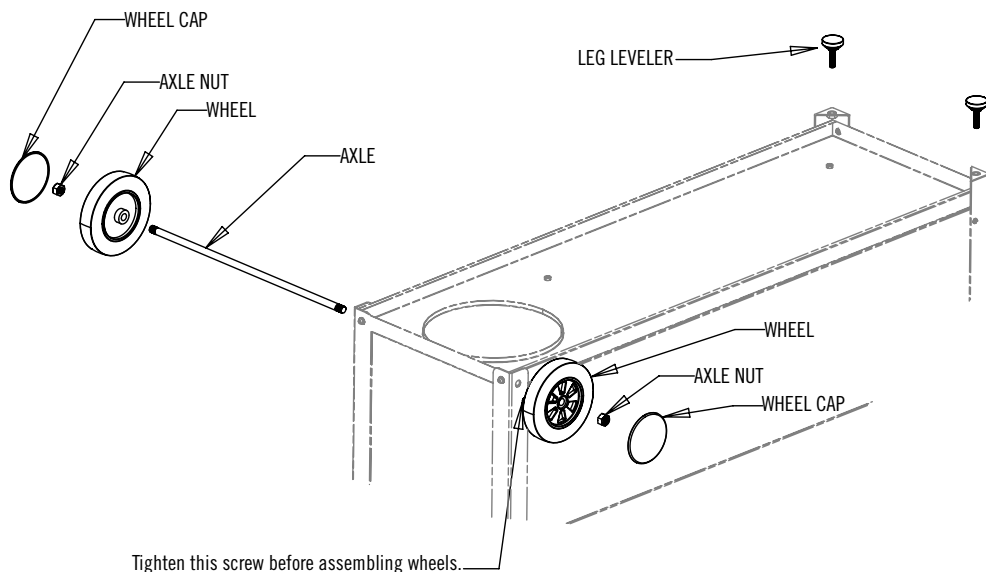

9. Stand cart upright.

10. Install the 4 shelf brackets using M6 x 12MM Button Head Screws and 6MM lock washers. Check width of brackets with shelf before tightening hardware.

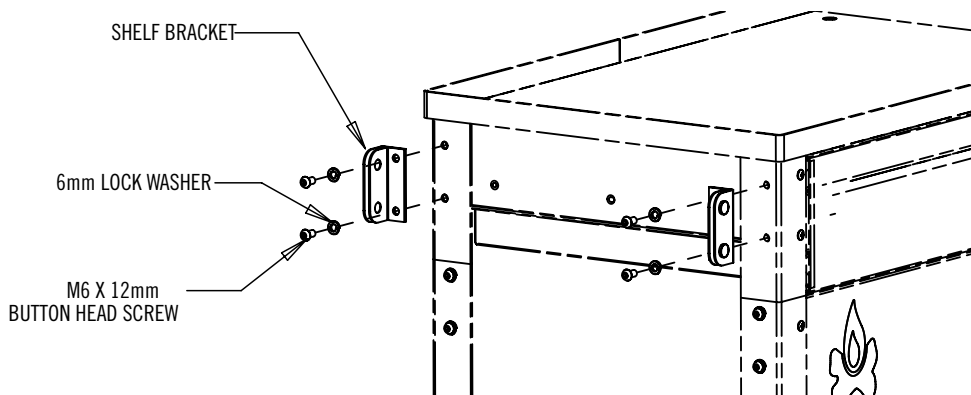

11. Tighten all hardware.
12. Assemble side shelves by inserting hook over the bottom rod of the brackets. Lift shelf up and rotate into upper rod. Press shelf down to lock into position.

