


How to replace the Pellet Grill Hot Rod



Warning: Before you begin make sure the item is unplugged from the power source.

YouTube Video:
https://www.youtube.com/watch?v=V9Q5IMCbj_A&t=3s

This is the hot rod inside of the pellet smoker.

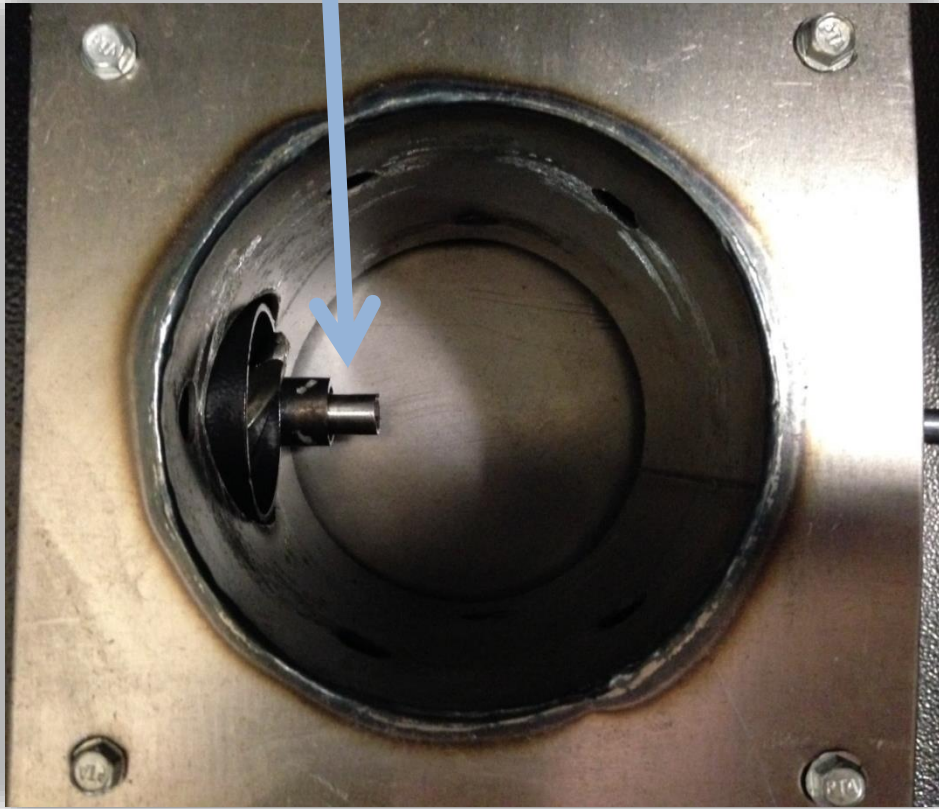


You will need to remove the hopper in order to replace the hot rod and get to the auger.





You will need to take the bottom panel off of the hopper. Unscrew the 4 screws on the bottom panel. 1 on the front, 2 on the side and 1 on the back.

Drop the bottom panel, then you will need to cut the zip ties off the wires.

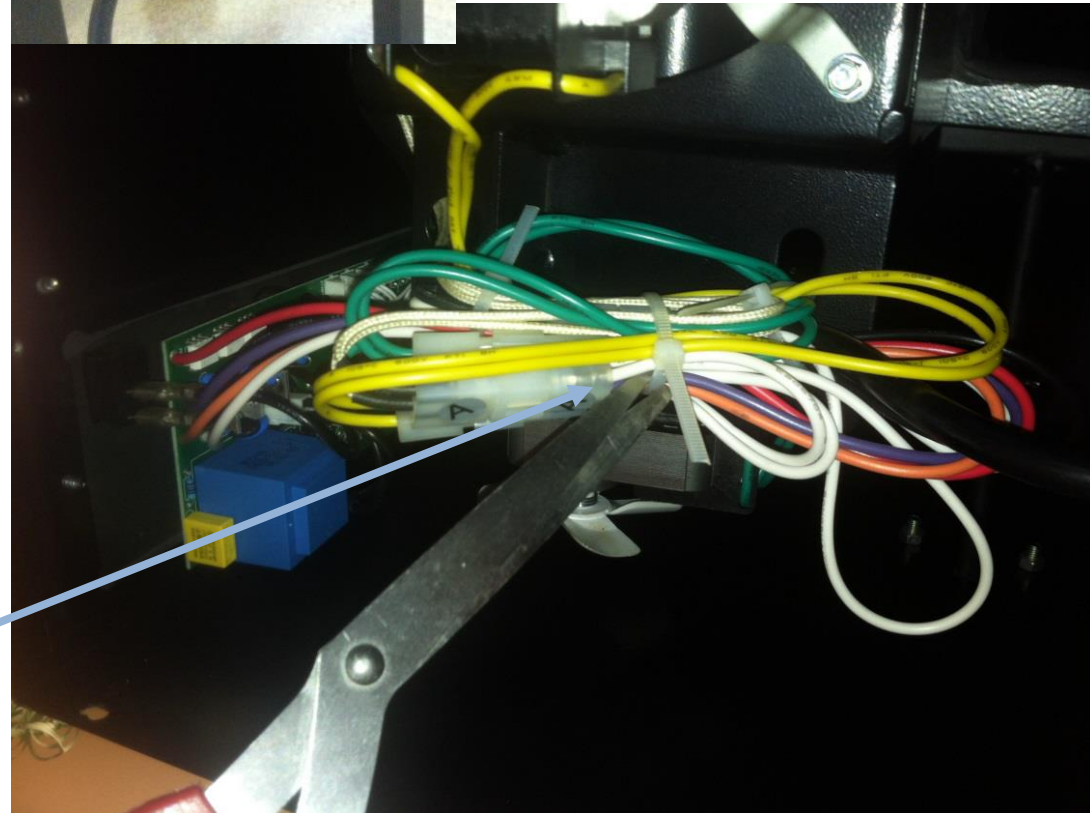

Once you have taken the bottom panel off, to make it easier you will want to take the hopper off of the pellet grill, to then remove the hot rod.

To remove the hopper you will need to unplug the internal thermometer from the controller. You will need to remove the 2 screws holding in the controller.


Then you will unplug the internal thermometer from the controller. It is located in the top clasp.







You will then want to remove the 4 screws that are holding the hopper onto the pellet grill. (Please note in the picture you cannot see the 2 other screws that are behind the shelf that the drip pan to sits on.)


You will then remove the 2 screws that are holding the burn cup down to the grill. Once you get those loosened, the hopper will slide right out.

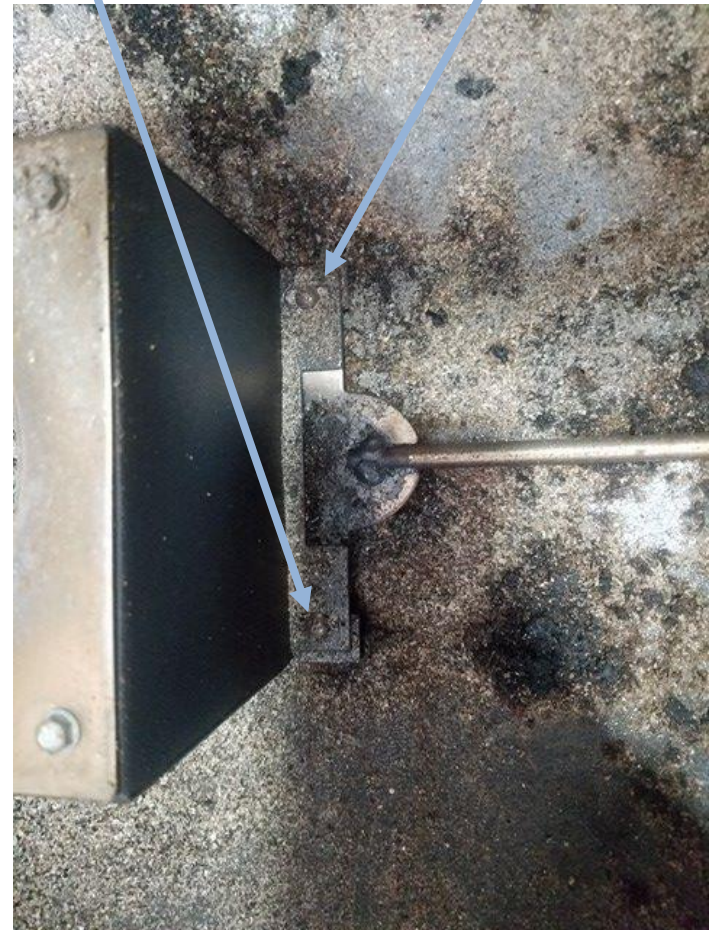

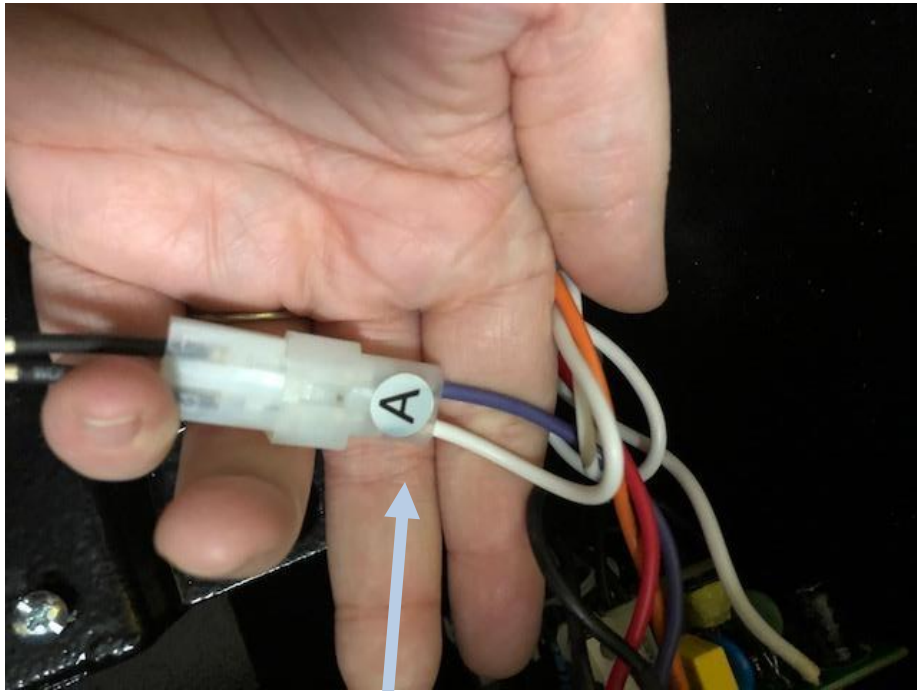


From here we flipped the hopper upside down, to better access the under part of the hopper. You will want to disconnect the A wires from the controller. Once you have them disconnected, you will want to feed the plug through the hole the wires are coming from.

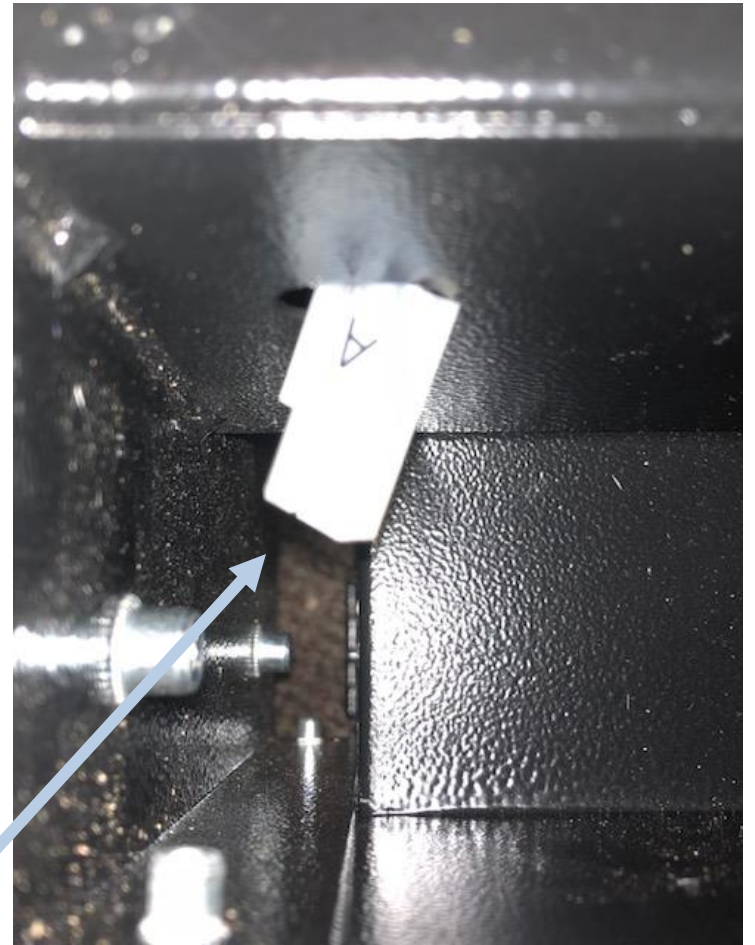

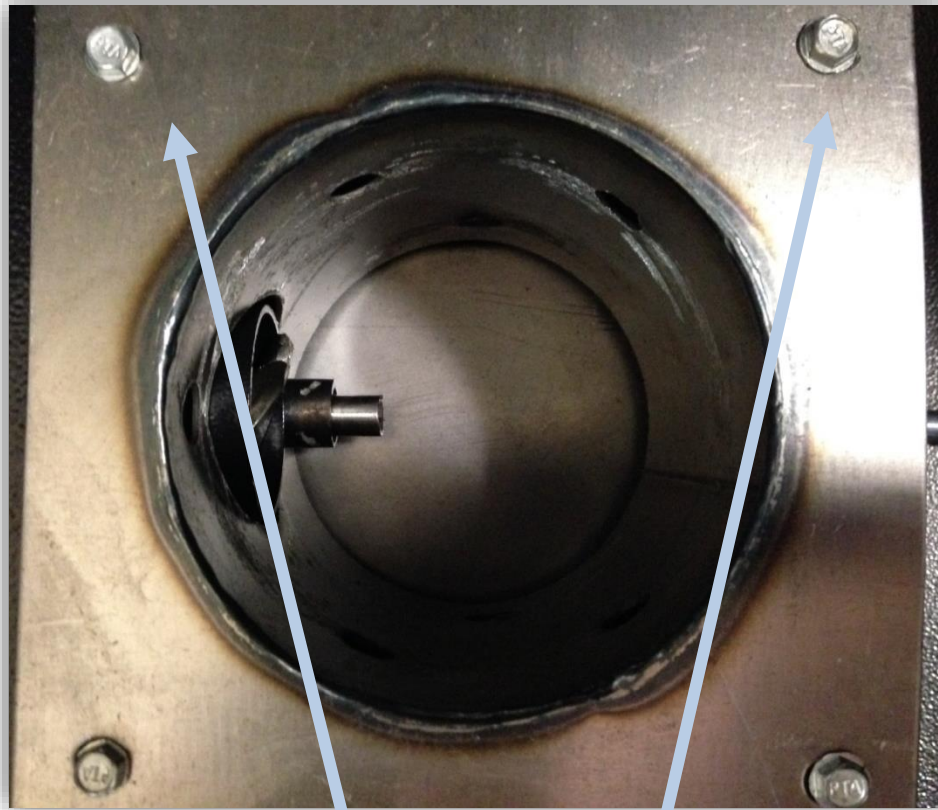


Once you have disconnected and pushed the wires to the hotrod in the auger pipe, we can now take out the burn cup. You will need to remove these 4 screws holding the burn cup in place.

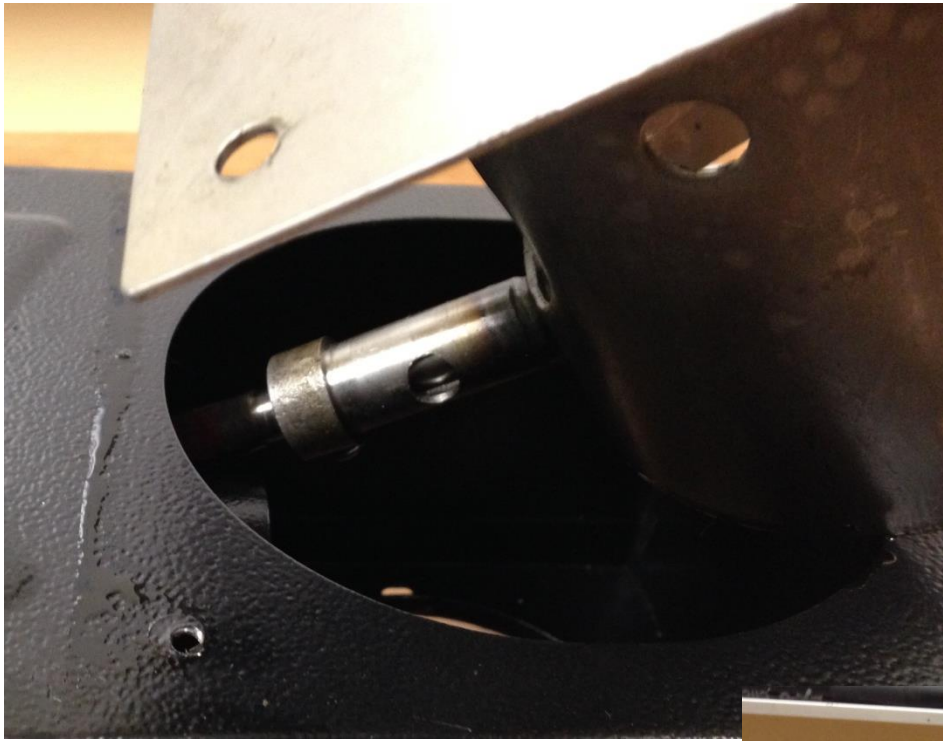

Take the burn cup out of the auger assembly. You will need to tilt and rotate it to get to the perfect angle to pull it out.

The hot rod should pull out with the burn cup.



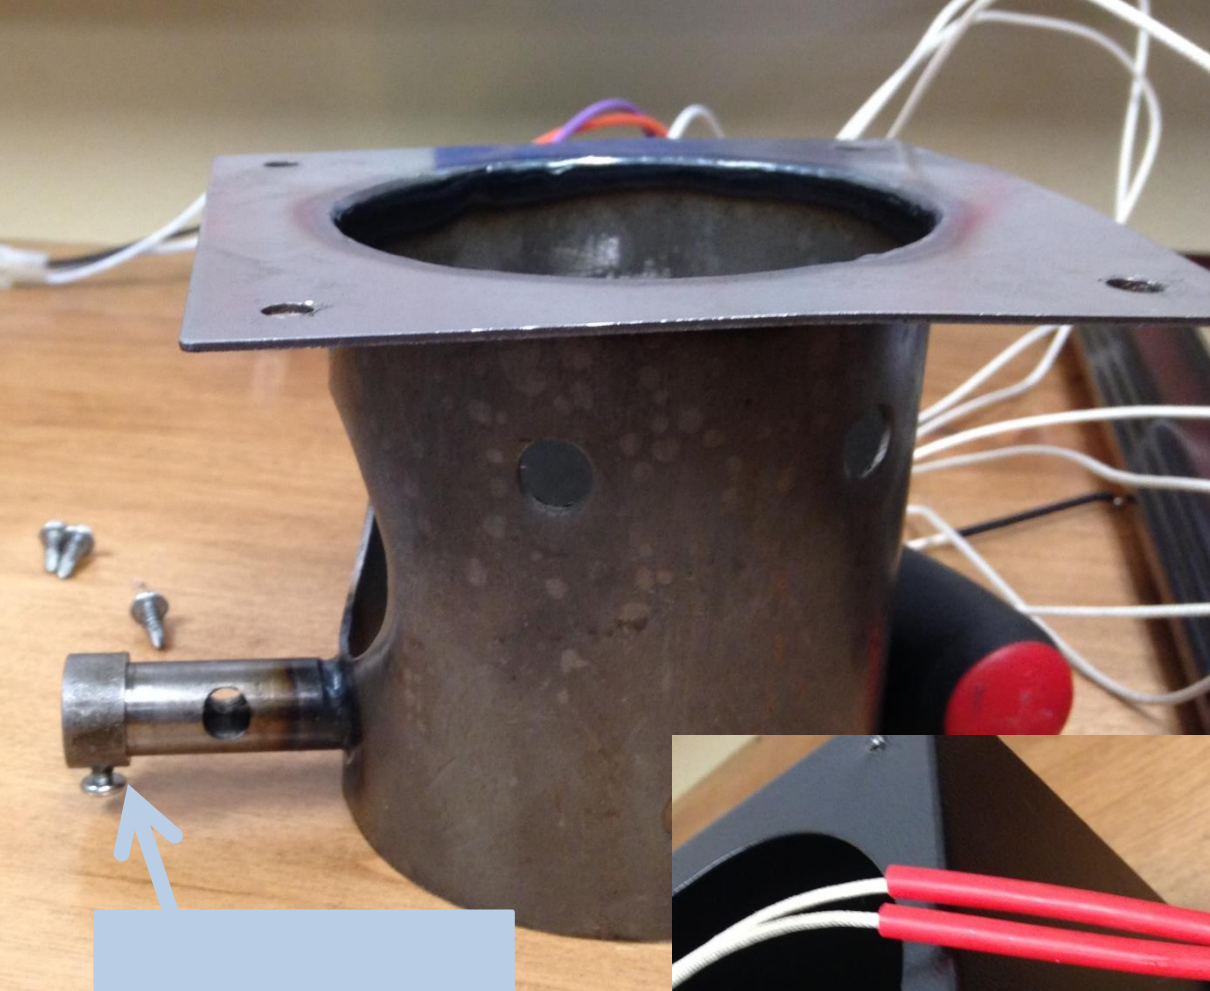


Loosen this screw
to release the hot
rod from the burn
cup.




Thread the new hot rod into the opening, leaving the clear clip out at the other end.

Reach into the burn cup, under auger and pull heating rod out. Insert the hot rod back into the burn cup. Put the tip of the hot rod about .25" into the burn cup and tighten the screw to hold it in place.

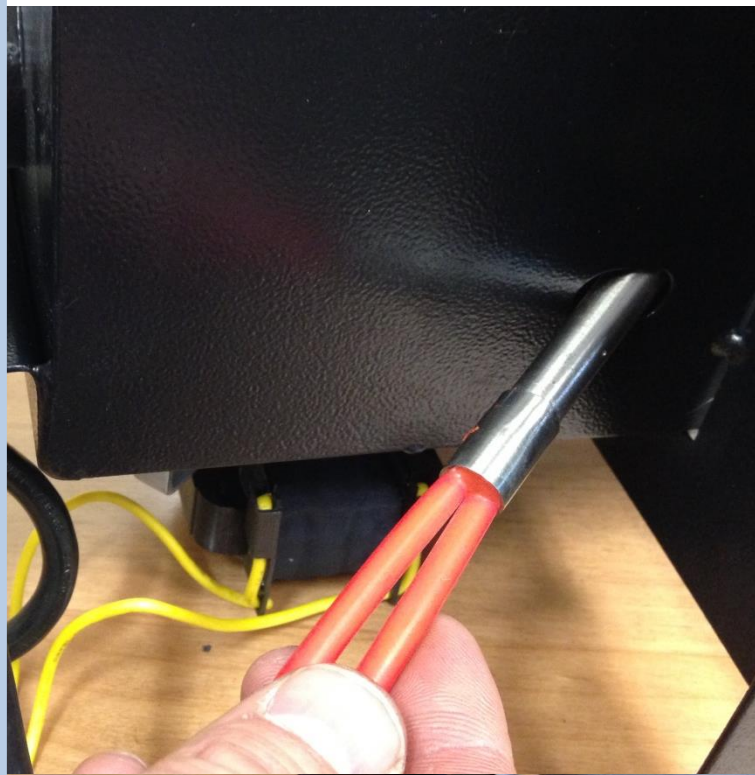

Reinsert burn cup and put pellet grill back together. Make sure you bundle the wires together with something to avoid them getting caught in the fan.

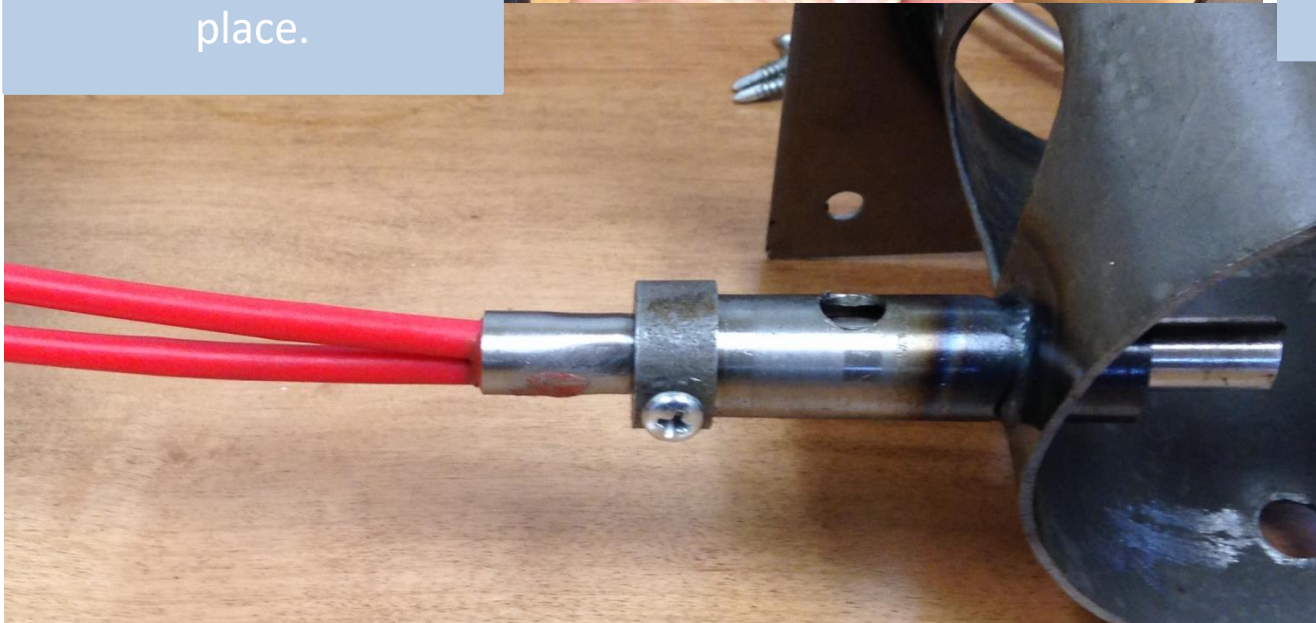

After troubleshooting with this manual, if you are still experiencing problems, please contact our customer service department. Our agents will be happy to help. You can contact them at 1-800-650-2433.

Note: The Manufacturer is not liable for any replacement parts, equipment, and/or injury due to improper installation or modification.